



1	714970-01560	Block Assy, Cylinder
6	114350-01700	• Cover, Starter
7	26106-100122	• Bolt M10x 12 Plated
8	105025-01220	Nut 10
9	114650-01230	Stud, Cyl. Head
10	114650-01240	Stud, Cyl. Head
11	114650-01250	Nut 10
12	114650-01260	Washer
13	114651-01330	Gasket, Cyl. Head Crmp
19	114650-01380	O-ring
20	114650-01412	Gasket, Crank Case
21	114660-01471	Cover (d), Crank Case
24	114650-02100	• Bearing, Main
26	105425-01690	Plug M16
27	114699-01760	Cap, W/lub.oil Gauge
29	114299-01950	• O-ring
30	114250-01800	Shim Set
36	114250-01830	Cover, Inspec. Window
37	114250-01841	Gasket
38	114250-35150	Gasket
39	23876-010000	Pipe, L.o. Inlet
40	114270-01600	Plug P11/8, Screw
41	26106-080352	Parallel Pin 8x12
42	26226-060182	Bolt M 8x 35 Plated
43	26226-060222	Stud M 6x 18 Plated
44	26366-060002	Stud M 6x 22 Plated
45	22190-160002	Nut M 6
46	114299-02030	Seal Washer 16s
47	114650-02150	Retainer
48	24162-152112	Ball Bearing
49	24423-355008	Needle Bearing
50	24423-355008	Seal, Oil
51	26106-080122	Seal, Oil
52	22312-040080	Bolt M 8x 12 Plated
53	114650-02200	Pin 4x8, Straight
54	114650-02210	Main Bearing Us=0,25 Main Bearing Us=0,50

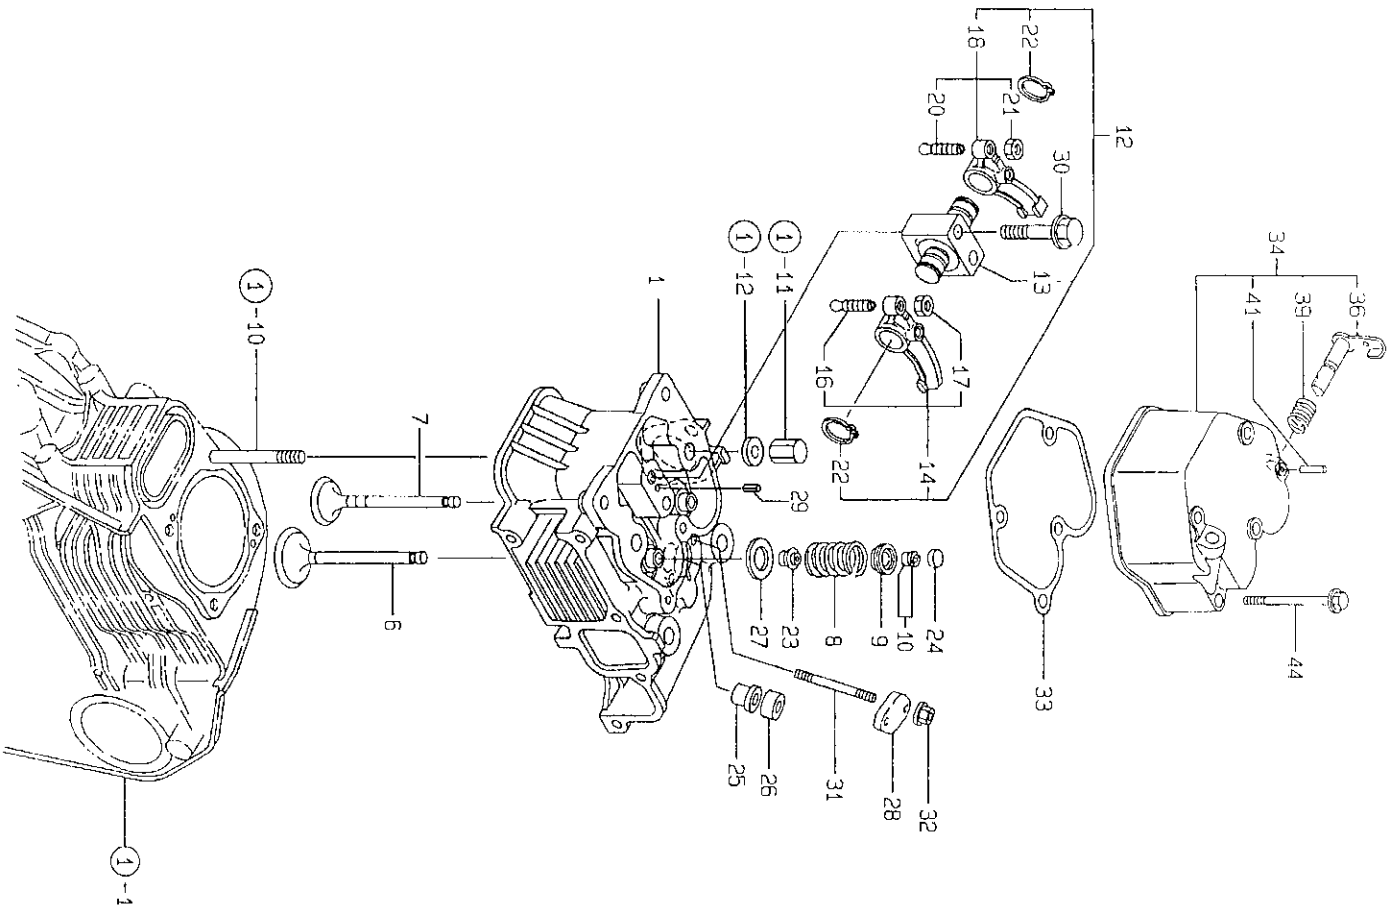


N. Rif.	Codice Ricambio
1	114651-11020
6	114651-11100
7	114651-11110
8	114650-11121
9	119620-11180
10	27310-070001
12	114651-11250
13	114651-11260
14	114651-11650
16	114250-11240
17	26836-060002
18	114651-11660
20	114250-11240
21	26836-060002
22	22242-000150
23	114650-11340
24	104211-11370
25	114771-11461
26	114771-11470
27	114650-11600
28	114250-11901
29	22351-040008
30	26106-080552
31	26226-060502
32	26366-060002
33	114651-11310
34	114651-11950
36	114250-03591
39	114250-03640
41	22312-030160
44	26106-060702

Descrizione
Cylinder Head
Valve Suction
Valve Exhaust
Spring Valve
Retainer, Spring
Cotter Assy
Support Cmp, Arm
• Support, Rocker Arm
• Arm Assy, Intake
• Screw, Valve Adjust.
• Lock Nut 6
• Arm Assy, Exhaust
• Screw, Valve Adjust.
• Lock Nut 6
• Circlip 15
Seal, Valve Stem
Cap, Valve
Gasket, Nozzle
Spacer, Nozzle
Washer
Retainer
Spring Pin 4x 8
Bolt M 8x 55 Plated
Stud M 6x 50
Nut M 6
Gasket, Bonnet
Bonnet Assy, Head
• Shaft Assy, Decomp.
• Spring
• Parallel Pin 3x16
Bolt M 6x 70 Plated

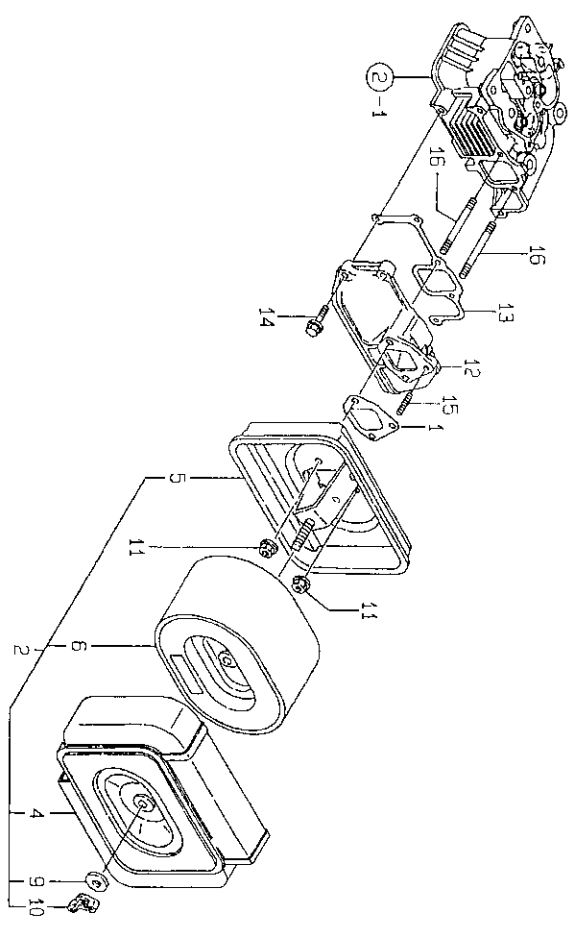


1	114650-12211
2	714650-12560
4	114650-12520
5	114650-12530
6	114650-12590
9	114252-12560
10	114252-12550
11	114250-12300
12	114699-12020
13	114650-12301
14	26106-060252
15	26226-060142
16	26226-060752

Descrizione
Gasket Air Cleaner
Cleaner Assy. Air
• Cover, Air Cleaner
• Case, Air Cleaner
• Element/W/Pre-filter
• Washer M 8, Seal
• Wing-nut, M 8
U-nut
Pipe, Air Intake
Gasket, Air Intake
Bolt M 6x 25 Plated
Stud M 6x 14 Plated
Stud M 6x 75

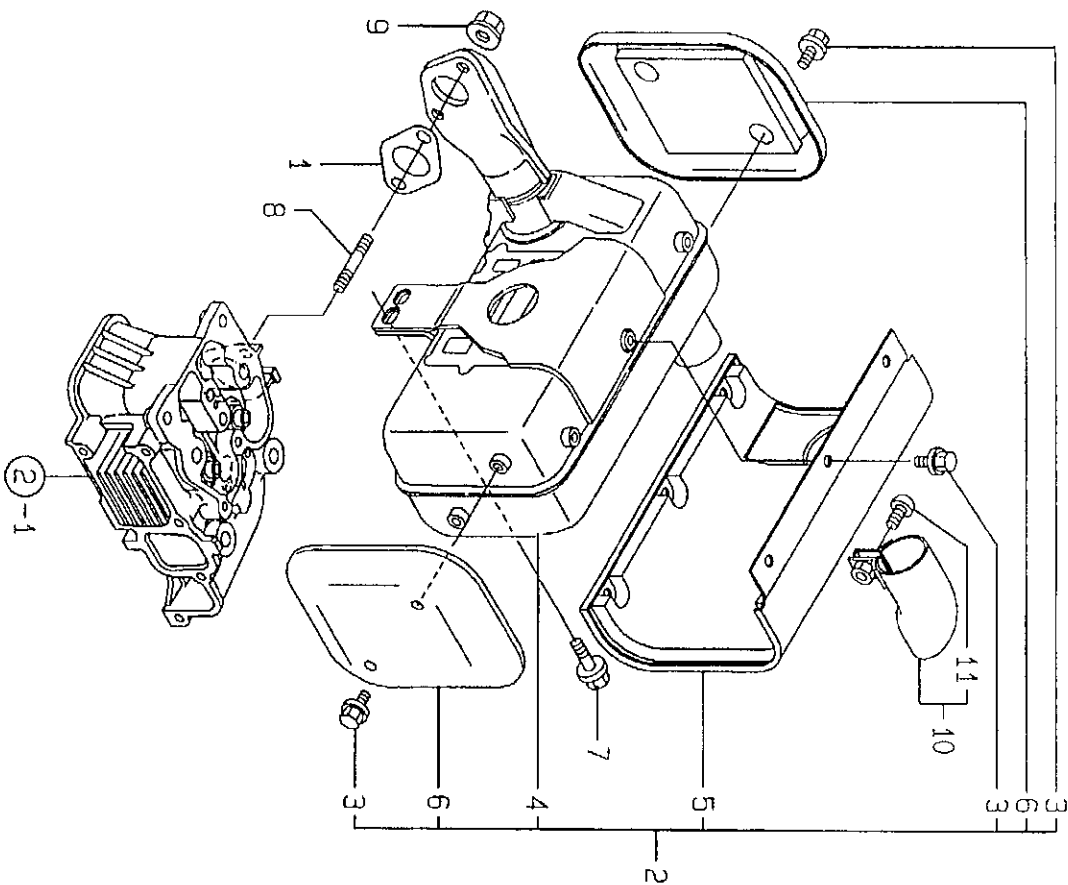


1	114650-13201
2	114970-13550
3	160260-01580
4	114970-13560
5	114970-13700
6	114970-13710
7	26106-080182
8	26216-080182
9	26366-080002
10	114658-13800
11	26554-060182

Descrizione
Gasket (non-asp.)
Muffler Assy
• Bolt M 6x 6
• Muffler
• Cover (a), Muffler
• Cover, Muffler
Bolt M 8x 18 Plated
Stud M 8x 18 Plated
Nut M 8
Extension, Exh.
• Screw M 6x 18

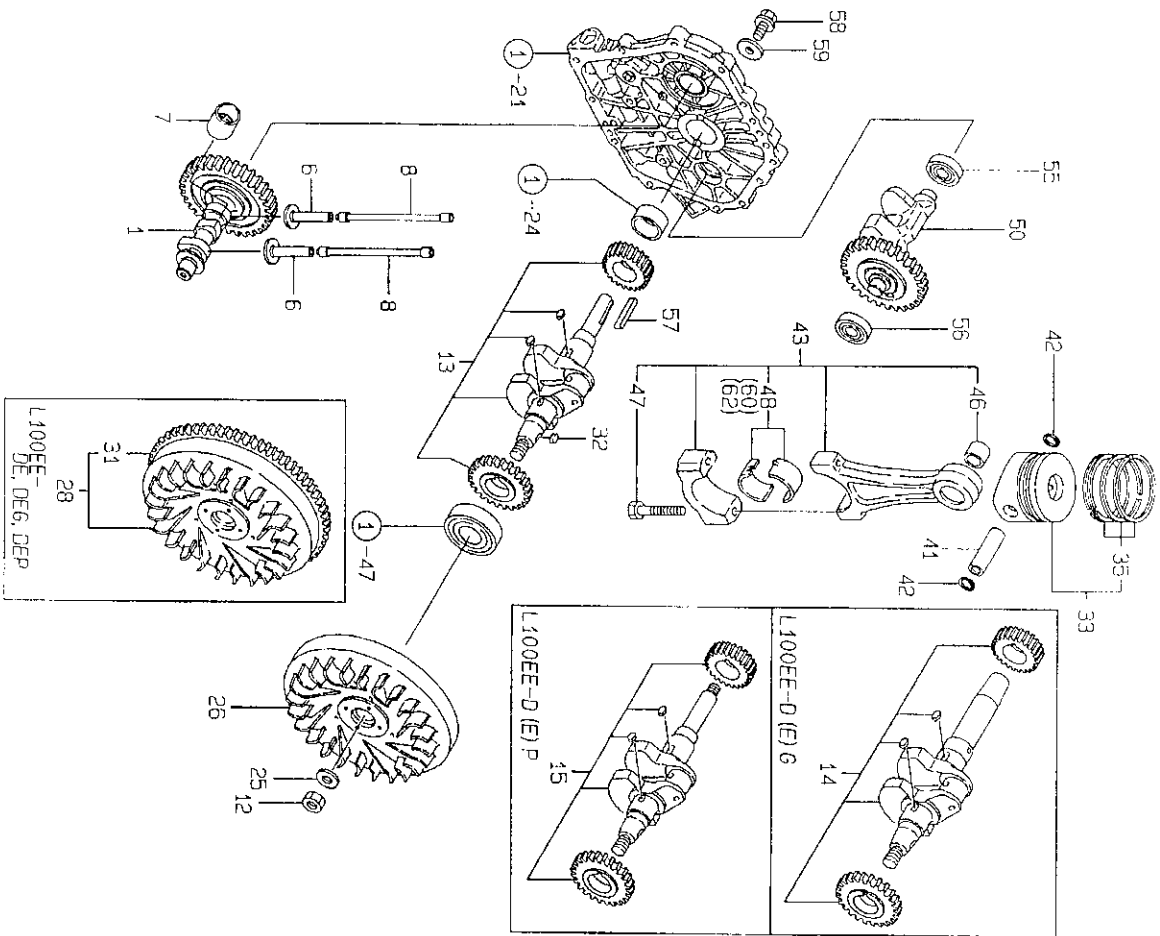

N. Rif.	Codice Ricambio	Descrizione
1	714689-14580	Camshaft (d) Assy
6	114650-14200	Tappet
7	114771-14260	Tappet F.o.
8	114650-14401	Rod Push
12	122710-01220	Nut M18
13	714657-21700	Crankshaft Assy (dgm)
14	714658-21700	Crankshaft Assy (dgm)
15	714659-21700	Washer, Flywheel
25	114650-21551	Flywheel (d)
26	114660-21402	Flywheel (del) W/gear
28	114662-21593	• Gear, Ring
31	114662-21501	• Gear, Ring
32	22512-050140	Key 5x 14
33	714652-22720	Piston W/rings
35	714970-22500	• Ring Set, Piston
41	114699-22300	Pin, Piston D=23
42	129792-22400	Circlip 23
43	714650-23700	Rod Assy, Connecting
46	124060-23100	• Bush, Piston Pin
47	105300-23200	Bolt, Rod
48	714650-23600	• Bearing, Crankpin
50	714970-28511	Shaft Assy, Balancer
55	24101-062034	Ball Bearing
56	24101-063034	Ball Bearing
57	160842-21150	Key 6,3x50
58	160842-21250	Bolt 7/16-20unf
59	160842-21260	Washer
60	714650-23610	Bearing, Pin (u.s.=0.25
62	714650-23620	Bearing, Pin (u.s.=0.50

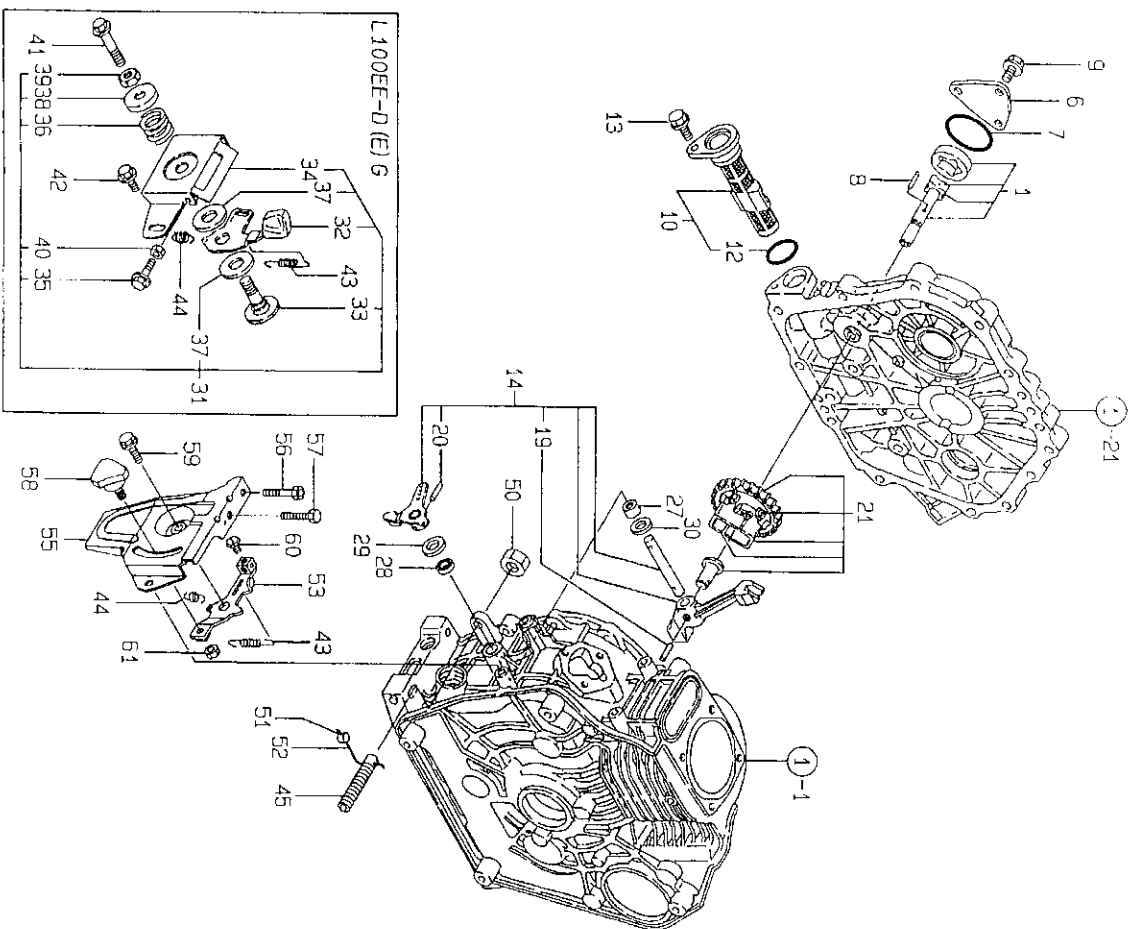


1	114650-32010
6	114250-32070
7	103338-32570
8	22312-030160
9	25476-060142
10	114250-35110
12	24341-000224
13	26106-060162
14	714650-61500
19	22322-030200
20	22322-030200
21	714685-61700
27	114270-61520
28	114770-61600
29	114770-61610
30	114770-61190
31	183250-66500
32	183250-66050
33	183250-66070
34	183250-66100
35	114250-66440
36	104200-66820
37	104200-66830
38	104200-66850
39	26696-100002
40	26757-060002
41	26106-060452
42	26476-060142
43	114970-66010
44	114250-66200
45	114651-66550
50	26696-100002
51	135210-61090
52	22451-060000
53	114250-66050
55	114299-66100
56	114250-66440
57	102100-67080
58	160725-78350
59	26106-060142
60	26117-040088
61	26347-060002

1	Pump Assy, Lub oil
6	Cover, Lub Oil Pump
7	O-ring
8	Parallel Pin 3x16
9	Bolt M 6x 14, Tapping
10	Strainer, Lub Oil
12	• O-ring 1a S-22.4
13	Bolt M 6x 16 Plated
14	Lever Assy, Governor
19	• Taper Pin 3x20
20	• Taper Pin 3x20
21	Governor Assy
27	Needle Bearing F1810
28	Seal, Oil
29	Washer, Thrust
30	Washer
31	Stay, Handle
32	• Handle, Regulator
33	• Shaft, Handle
34	• Bracket, Regulator
35	• Bolt, Adjusting
36	• Spring
37	• Plate, Friction
38	• Washer (b)
39	• Nut M10
40	• Nut 6
41	Bolt M 6x 45 Plated
42	Bolt M 6x 14, Tapping
43	Spring, Regulator
44	Spring, Return
45	Torque Spring Assy
50	Nut M10
51	Lead
52	Wire 0.6
53	Handle, Regulator
55	Stay, Handle
56	Bolt, Adjusting
57	Bolt, Adjusting
58	Knob (w/m6x15)
59	Bolt M 6x 14 Plated
60	Bolt 4* 8
61	U-nut 6


Descrizione

1	114650-45201	Cover
2	114350-45320	Rubber Seal
3	114350-45340	Collar
4	183720-55210	Grommet
5	26106-060202	Bolt M 6x 20 Plated
6	114668-45102	Case, Fan (silver) (17)
7	114250-45301	Rubber, Cushion
8	114250-45310	Collar
9	114650-45330	Seal, Fan Case
10	114370-45351	Bolt, Fan Case
11	114660-76051	Stater Assy, Recoil
12	114660-76250	Recoil Assy
13	114650-76520	Reel, Recoil
14	114660-76530	Case (d) W/no Label
15	160910-76530	Ratchet
16	114650-76540	Spring, Spiral
17	160910-76550	Washer, Thrust
18	160910-76560	Spring, Friction
19	160910-76570	Spring, Return
20	160910-76580	Plate, Friction
21	160910-76620	Knob, Starter
22	160910-76630	Rope, Starter
23	160910-76650	Washer (b)
24	22217-060000	Spring Washer 6
25	26717-060002	Nut M 6
26	114660-76591	Pulley, Starter
27	26106-060082	Bolt M 6x 8 Plated
28	26106-060122	Bolt M 6x 12 Plated

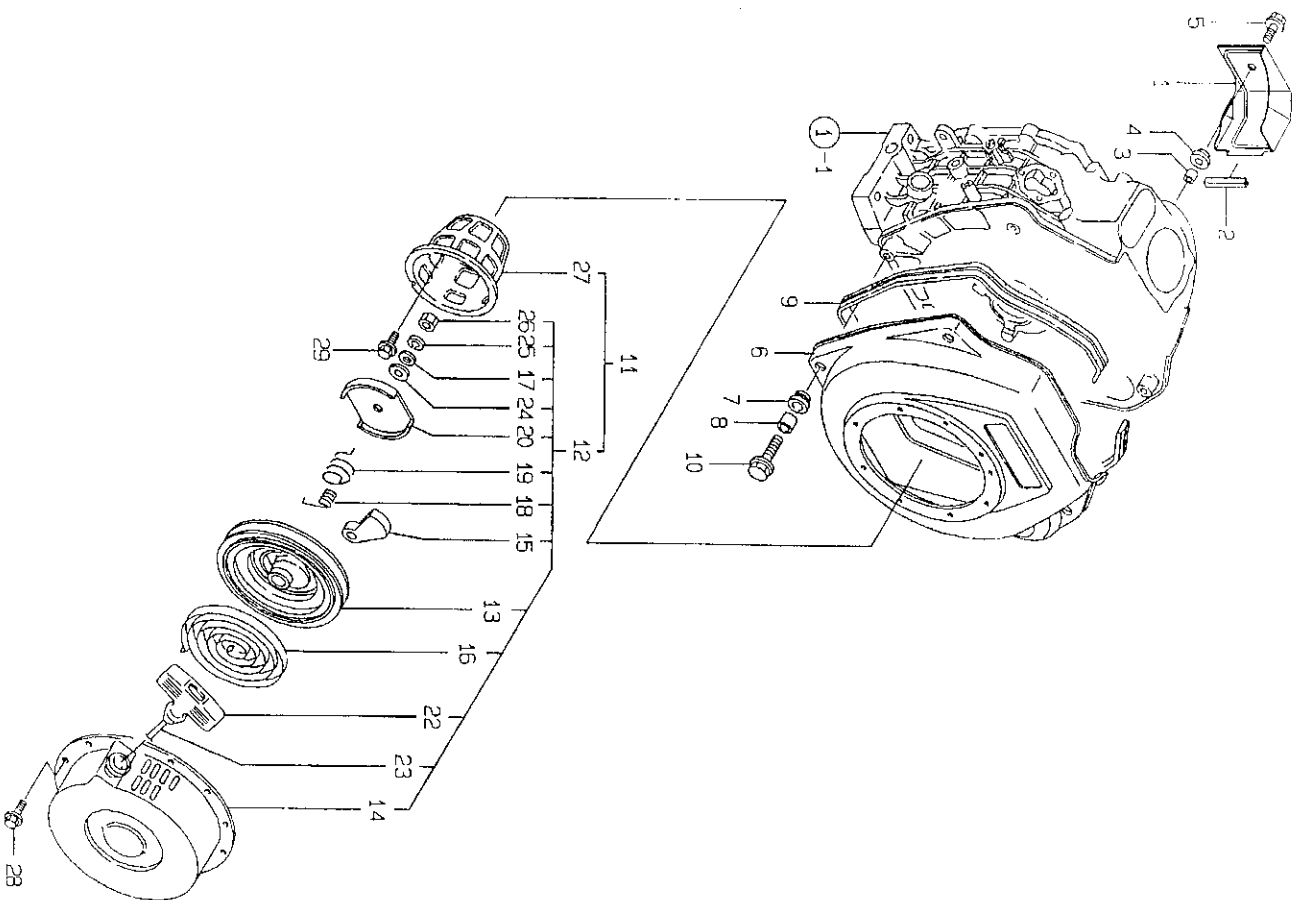


N. Rif. Codice Ricambio

Descrizione

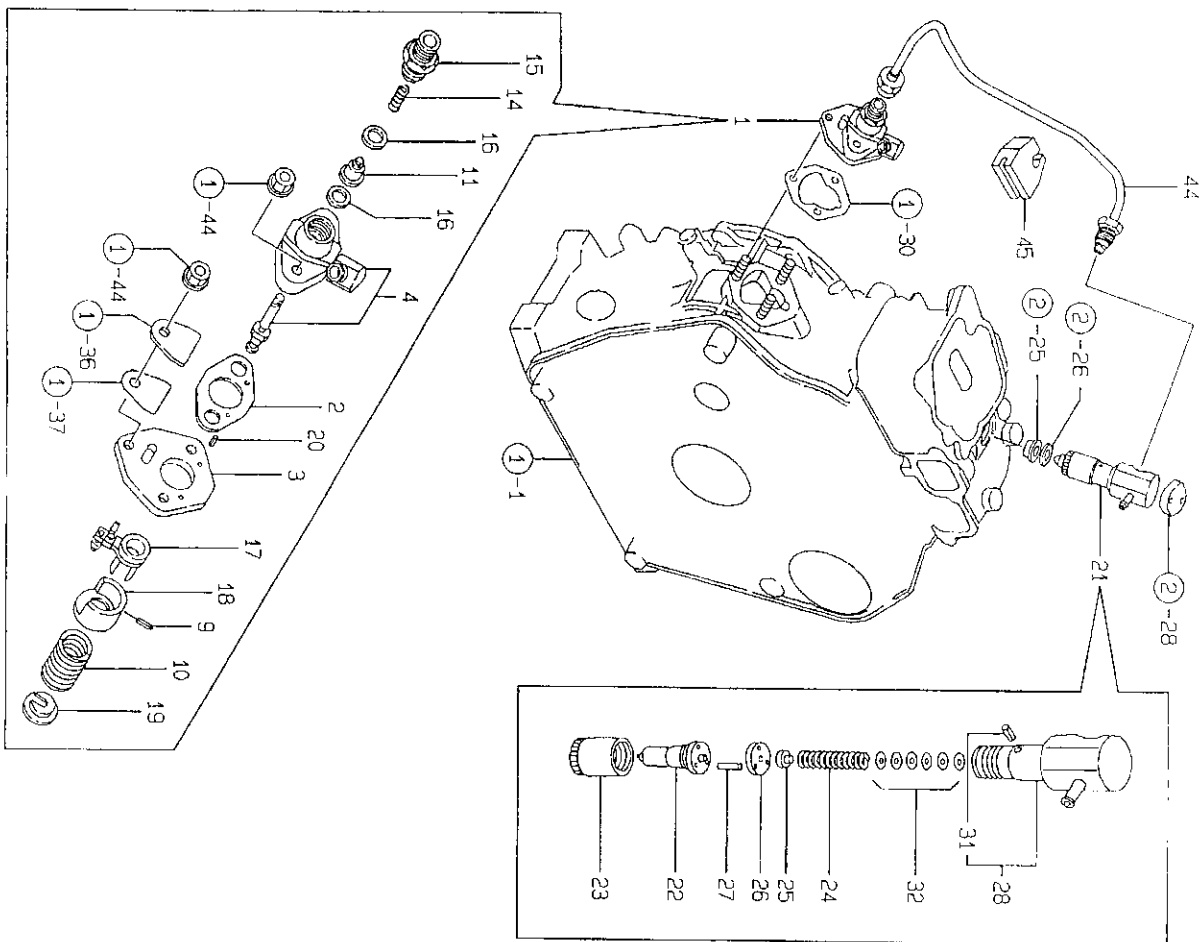

1	714970-51700
2	105546-51020
3	114250-51080
4	114970-51100
9	22351-030008
10	114250-51160
11	114650-51300
14	105546-51330
15	114250-51340
16	124550-51350
17	114250-51600
18	114250-51640
19	114250-51650
20	22351-020006
21	714651-53100
22	114651-53000
23	119593-53080
24	114250-53120
25	119593-53130
26	114775-53140
27	114775-53210
28	114775-53100
31	114775-53330
32	114250-53400
44	114651-59801
45	114650-59850

1	Pump Assy, F inject
2	Gasket
3	Plate
4	Body, F. I. Pump
9	Spring Pin 3x 8
10	Spring
11	Valve Assy, Delivery
14	Spring, Deliv. Valve
15	Holder, F.I.p.delive
16	Gasket, Delivery
17	Lever Assy, Control
18	Seat (a) Spring
19	Seat (b) Spring
20	Spring Pin 2x 6
21	Valve Assy, F inject
22	Nozzle Assy
23	Nut, Nozzle Case
24	Spring, Nozzle
25	Retainer, Spring
26	Spacer, Valve Stop
27	Pin
28	Holder Assy
31	Pin
32	Shim Pack
44	Pipe, Fuel Injection
45	Bracket, Pipe

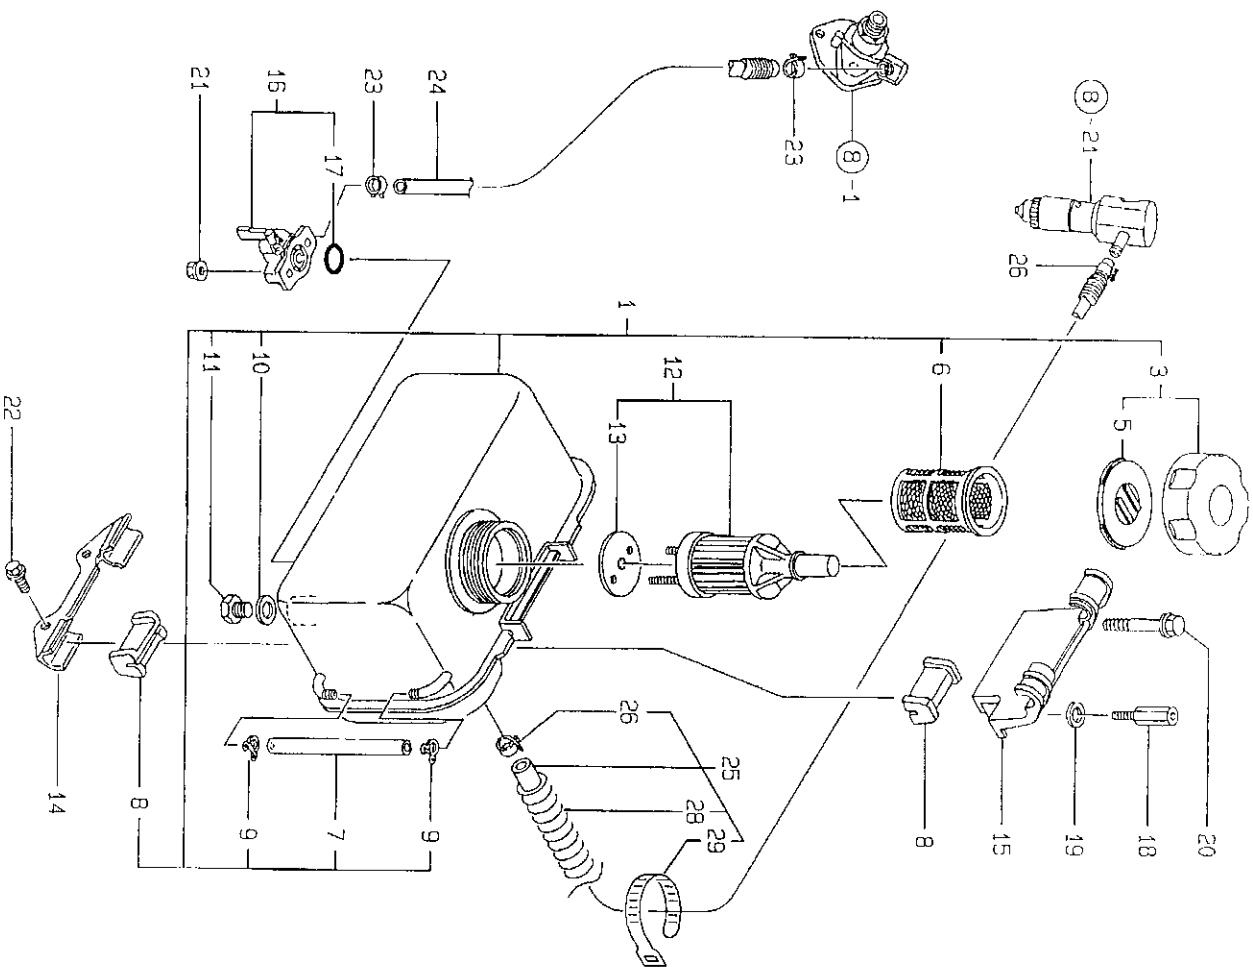


1	714650-55130
3	114288-55040
5	114288-55080
6	114250-55100
7	114650-55150
8	114250-55201
9	103854-55220
10	23414-080000
11	105300-55080
12	114250-55121
13	114250-55130
14	114299-55210
15	114699-55230
16	114250-55300
17	24341-000150
18	114650-55810
19	22117-080000
20	26106-080452
21	26366-060002
22	26476-060142
23	106990-44660
24	114250-59051
25	114652-59300
26	124722-59050
28	114652-59310
29	121750-59890


Descrizione
Tank Assy. Fuel
• Cap Assy. Tank
• Valve
• Filler. Fuel
• Pipe. Gauge
• Damper. Fuel Tank
• Clamp
• Gasket 8, Round
• Plug. Drain
• Filter. Fuel Oil
• Gasket
• Stay
• Stay (b). Fuel Tank
• Cock Assy. Fuel
• O-ring 1a S-15.0
• Bolt. Lifting
• Washer 8
• Bolt M 8x 45 Plated
• Nut M 6
• Bolt M 6x 14. Tapping
• Clip. Hose
• Pipe. Fuel Oil
• Pipe. Fuel Return
• Clamp 9
• Tube. Protect
• Clamp 140

Descrizione

1	114362-77011	Starter (s114-414a)
2	114381-77110	• Armature
3	X2114811000	• Washer Kit, Thrust
4	X2114715500	• Stopper Set, Pinion
5	114381-77130	• Coil Assy, Field
6	114381-77140	• Cover, Rear
7	114371-77160	• Holder Assy, Brush
8	114371-79040	• Brush (-)
9	114371-79050	• Brush (+)
10	114371-79060	• Spring, Brush
11	X2114455080	• Pinion Assy
12	114381-77150	• Housing Assy, Gear
13	114371-77170	• Cover Kit, Dust
14	X2114560130	• Lever Kit, Shift
15	X2114275010	• Switch Assy, Magnet
16	X2114680050	• Bolt, Through
17	114371-79070	• Bolt M 6x 37
18	X2114274200	• Cover, Terminal
19	26106-100302	Bolt M10x 30 Plated
20	26716-080002	NUT M 8
21	114351-78251	Dynamo Assy
22	114351-78751	• Stator Assy
23	114351-78761	• Wheel, Dynamo
24	160710-78710	Clamp, Wire
25	26106-060122	Bolt M 6x 12 Plated
26	26476-060202	Bolt M 6x 20, Tapping
27	26577-060142	Screw M 6x 14
28	160970-77350	Rectifier
29	26106-060122	Bolt M 6x 12 Plated
30	183350-77400	Wire, Lead

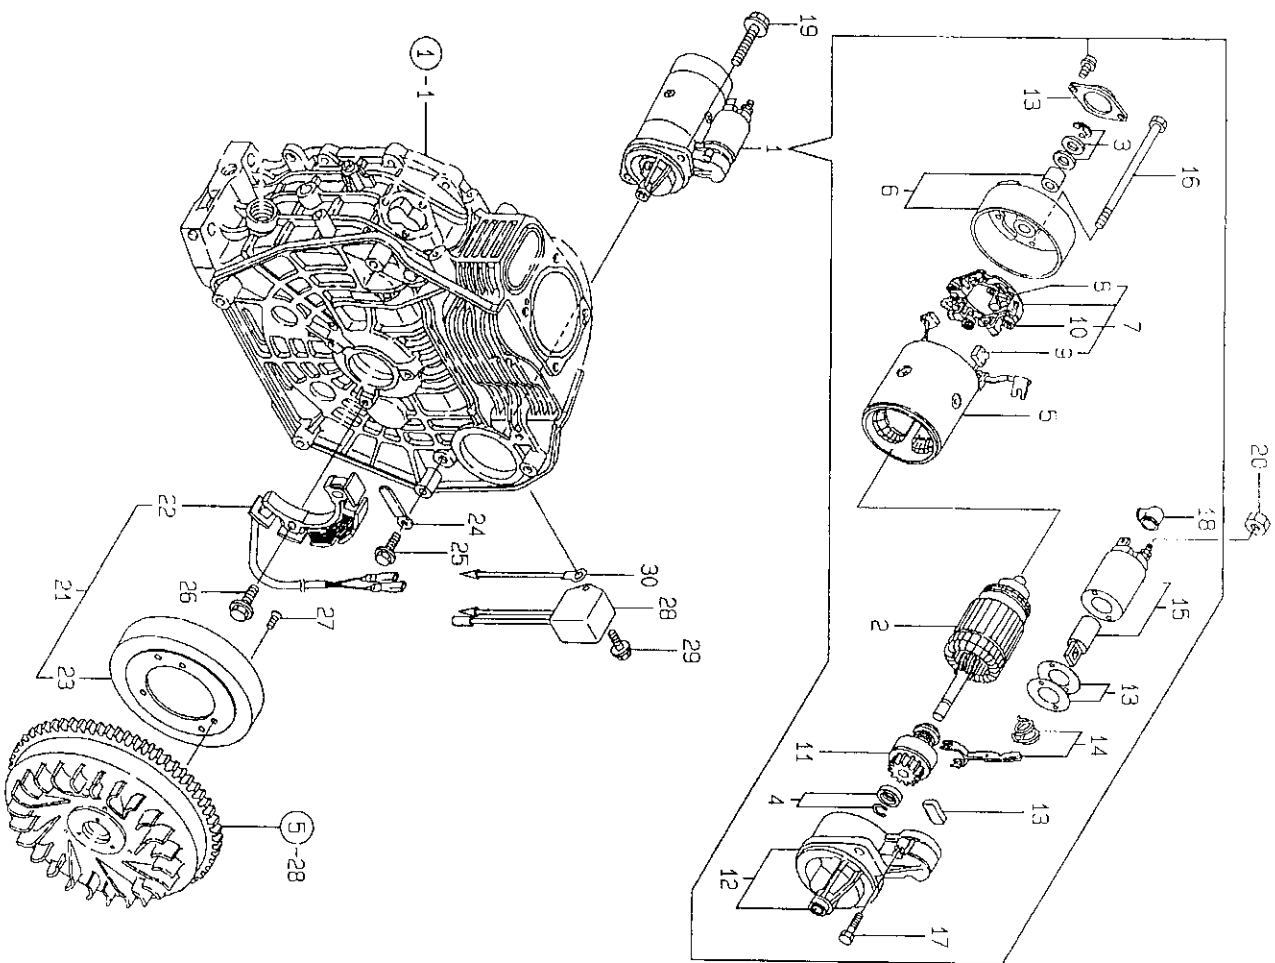


Titolo tavola
TOOL, LABEL & GASKET SET
N. Rif. Codice Ricambio

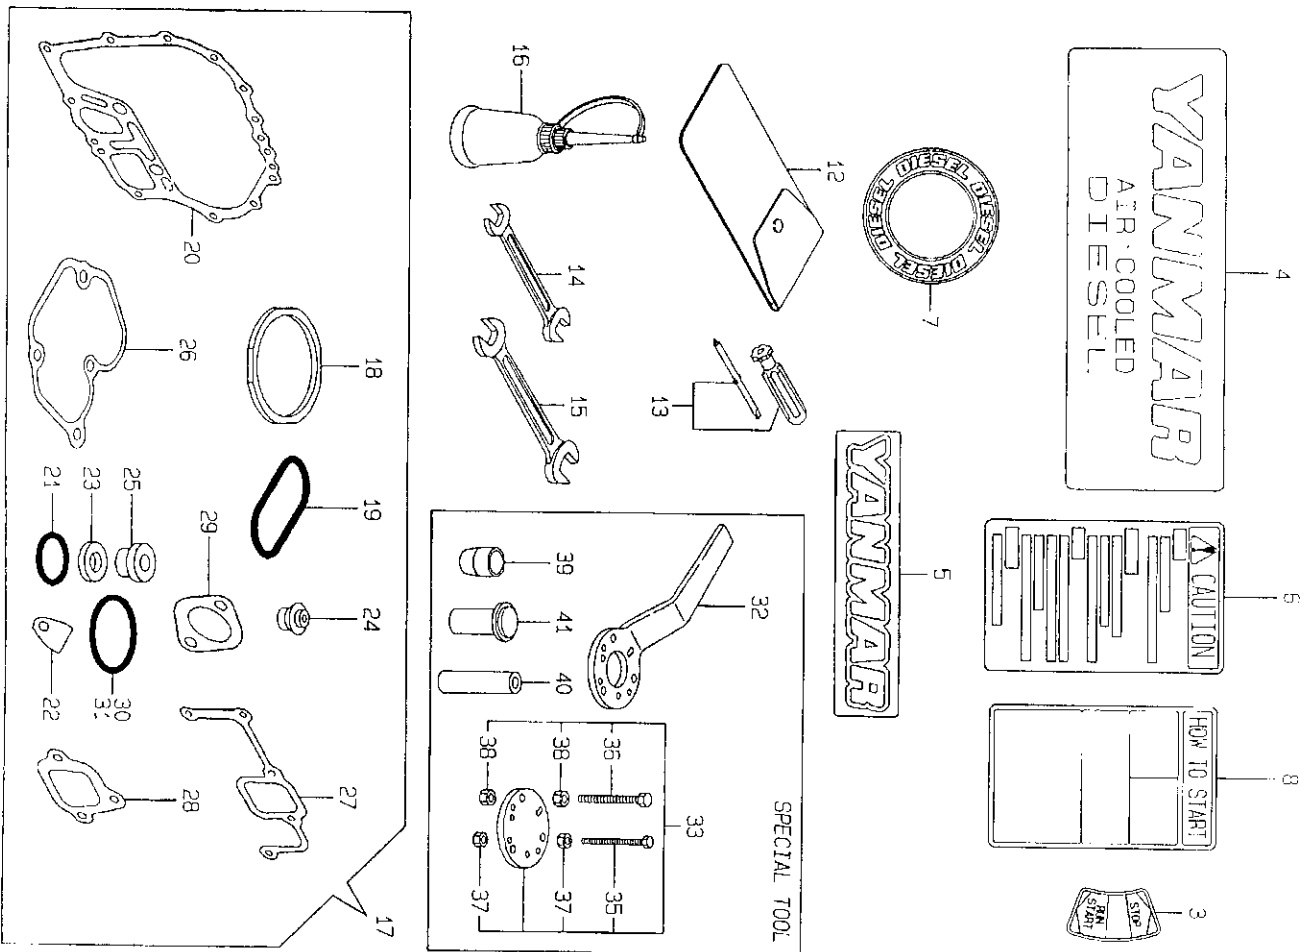

3	183250-07230
4	114250-07090
5	114250-07111
6	114268-07240
7	114261-07350
8	114268-07350
9	114250-92600
10	160330-92730
11	28110-100120
12	28110-140170
13	28210-000150
14	714651-92600
15	114651-01330
16	114650-01380
17	114650-01412
18	114299-01950
19	114250-01841
20	22190-160002
21	114650-11340
22	114771-11461
23	114651-11310
24	114650-12301
25	114650-12211
26	114650-13201
27	103338-32570
28	24341-000224
29	114250-92101
30	114250-92130
31	26116-060454
32	26116-080454
33	26716-060002
34	26716-080002
35	114668-92300
36	114650-92310
37	114650-92350
38	
39	
40	
41	

N. Rif.	Codice Ricambio	Descrizione
3	183250-07230	Label, Operation
4	114250-07090	Label, Air Cooled
5	114250-07111	Label, Yanmar
6	114268-07240	Label, Caution
7	114261-07350	Label, Caution
8	114268-07350	Label, How To Start
9	114250-92600	Bag, Tool
10	160330-92730	Screwdriver
11	28110-100120	Wrench 10X12
12	28110-140170	Wrench 14X17
13	28210-000150	Feeder, Oil
14	714651-92600	Gasket Set
15	114651-01330	Gasket, Cyl. Head Cmp
16	114650-01380	Gasket, Crank Case
17	114650-01412	Gasket, Crank Case
18	114299-01950	O-ring
19	114250-01841	Gasket
20	22190-160002	Seal Washer 16s
21	114650-11340	Seal, Valve Stem
22	114771-11461	Gasket, Nozzle
23	114651-11310	Gasket, Bonnet
24	114650-12301	Gasket, Air Intake
25	114650-12211	Gasket, Air Cleaner
26	114650-13201	Gasket (non-asp.)
27	103338-32570	O-ring
28	24341-000224	O-ring 1a S-22.4
29	114250-92101	F.w. Locking Handle
30	114250-92130	Remover, Flywheel
31	26116-060454	Bolt M 6x 45 Plated
32	26116-080454	Bolt M 8x 45 Plated
33	26716-060002	Nut 6
34	26716-080002	Nut 8
35	114668-92300	Guide, Oil Seal
36	114650-92310	Installing Tool
37	114650-92350	Installing Tool
38		
39		
40		
41		

Elettrovalvola alla pompa

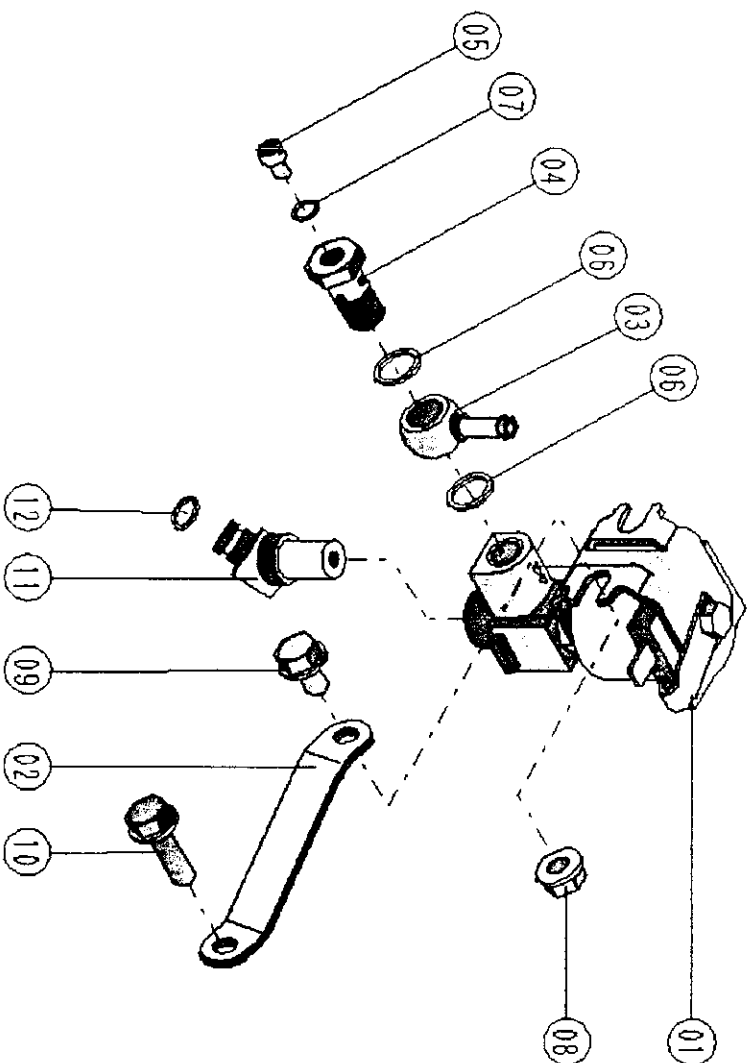

RIF	DESCRIZIONE	CODICE	QT.A x mot.
1	Elettrovalvola	114299-76900	1
2	Stafa	114299-76910	1
3	Raccordo	23387-071000	1
4	Vite raccordo	114299-59920	1
5	Vite spurgo	114299-59930	1
6	Rondella rame M10	114299-83010	2
7	Rondella rame M6	114299-83000	1
8	Dado M6	26366-060002	1
9	Vite 6x12	26106-060122	1
10	Vite 6x16	26106-060162	1
11	Introduttore	114299-59900	1
12	O.R. introduttore	114250-51190	1