

IS 9.6 **B**

Rev.0 A.A. 17/02/2015

cod.43375

--

Tipo modello
N° matricola
Codice



GB

**This manual has to be preserved for all through life of the
gen set to which ago reference**

GB

Thank you for having chosen a product MASE.

As a leading generator manufacturer, Mase Generators offers a wide range of generators with an output from 1 KVA portable generators to 1600 KVA units for special applications.

Founded in 1970, the Cesena-based company extends over a area of 16,000 square meters, including a 9,000 sq. mtr. manufacturing facility.

Mase Generators began as a company producing 500 Watt, light and compact portable generators. These generators

made the Mase Generators name well known throughout the world. Mase Generators is a leader in high quality, reliable products, and innovative research performed by Research and Development Department.

The generator you have purchased is the fruit of years of experience in the sector and for the modern conception, the strong sizing, the materials employees, the continuous updatings, constitutes an effective answer to the operators' demands of the sector.

This Manual instructions will furnish you useful information and precious suggestions so you can fully exploit all the possibilities that the generators offers you.

If any part of the manual resulted incomprehensible, please contact us.

In to renew our thanks we cordially greet you.



MASE GENERATORS S.p.A. Via Tortona, 345
47023 Cesena (FC) Italy
Tel.+39-0547-354311 Fax.+39-0547-317555

Technical data, informations, layouts of the texts and graphic preparations: edited by the Technical Office
Mase Generators

THE COMPANY MASE GENERATORS SPA RESERVES ALL RIGHTS TO IMPLEMENT MODIFICATIONS TO THIS PRESENT MANUAL WITHOUT ADVANCE NOTICE OR NOTIFICATION, WHEN NECESSARY, IN ACCORDANCE WITH ITS POLICY OF CONTINUAL PRODUCT IMPROVEMENT. THE MASE GENERATORS SPA, RESERVES ALL THE RIGHTS ON THE MANUAL PRESENT. ANY TOTAL OR PARTIAL REPRODUCTION IS PERMITTED WITHOUT WRITTEN AUTHORIZATION OF THE MASE GENERATORS SPA.

CONTENTS

GB

DEFINITIONS USED	5	6 MAINTENANCE	34
PRELIMINARY PRESCRIPTIONS	7	6.1 Preamble	34
1 GENERAL INFORMATIONS	6	6.2 Routine engine maintenance	34
1.1 Conform use	8	6.3 Engine oil check	34
1.2 Residual risks	8	6.4 Engine oil change	35
1.3 Safety symbols	9	6.5 Oil filter	35
1.4 Symbols on the generator group	10	6.6 Replacing / cleaning the fuel pump filter	36
1.5 Safety label informations	11	6.7 Replacing the line fuel filter	36
1.6 Reference documents	15	6.8 Bleeding the fuel system	36
1.7 Reference regulations and legislative provisions ..	15	6.9 Air filter	36
1.8 Marking	15	6.10 Draining the cooling system	37
1.9 Identification of the generator unit	15	6.11 Replacing the zinc anode	37
2 GENERAL CHARACTERISTICS	16	6.12 Seawater pump maintenance	38
2.1 Composition of generator unit	16	6.13 Checking / replacing the v-belt	38
2.2 Command and control panel	17	6.14 Alternator maintenance	39
2.3 Table of technical characteristics	18	6.15 Battery maintenance	39
3 INSTALLATION	19	6.16 List of recommended spare parts	40
3.1 General housing characteristics	19	6.17 Periods of inactivity	40
3.2 Lifting	20	6.18 Period checks and maintenance	41
3.3 Anchoring the generator	20	6.19 Anomalies, causes and remedies	42
3.4 Ventilation	20	6.20 How to order spare parts	42
3.5 Cooling water circuit	20	7 TRASPORT, STORAGE, LIFTING, HANDLING AND PACKAGING	43
3.5.1 Seawater feed system	20	7.1 Transport and storage	43
3.5.2 Components	21	7.2 Lifting and handling of the packed generator unit	43
3.5.3 Typical installations	22	8 GUARANTEE AND RESPONSABILITY	44
3.5.5 Exhaust system	25	8.1 Guarantee	44
3.6 Fuel circuit	26	8.2 Limits of responsibility	44
3.6.1 Fuel filter	26	9 DISPOSAL	44
3.6.2 Electric pump	26	9.1 Disposal of the waste materials deriving from maintenance and scrapping	44
3.7 Electrical connections	27	10 WIRING DIAGRAMS	45
3.7.1 Battery connection	27	10.1 Wiring diagrams	45
3.7.2 Control panel connection	27		
3.7.3 A.C. connection.	28		
3.7.4 Generator-network switching	29		
3.7.5 Emergency stop	29		
4 USING THE GENERATOR	30		
4.1 Preliminary checks	30		
4.2 Fuelling	30		
4.3 Starting the generator	31		
4.4 Stopping the generator	31		
4.5 Emergency stop	31		
5 SAFETY SWITCHES AND WARNING SIGNALS	32		
5.1 Protection against short-circuit and overload ...	32		
5.2 Protection against short-circuit of low voltage electrical system	32		
5.3 Control panel - alarm codes	33		

DEFINITIONS USED

GB

The terms used are current technical terms, and where considered necessary the meaning is described below

- **Generator**

An assembly of an internal combustion piston engine and an alternate current, synchronous, 2-4 pole, self-excited generator, joined together to create a station for self-production of electrical energy.

- **User system**

Composed of the power supply circuits of the user equipment, including the relevant sectioning, handling, breaking, transformation, protection, etc. devices which do not form part of the production, transmission and distribution systems.

- **Category 1 electrical system**

A system where the rated voltage is greater than 50 V and smaller than 1000 V including alternate current.

- **Load**

A set of numerical values of electrical and mechanical magnitudes which characterise the requirements imposed on a rotary machine by an electrical circuit or by a mechanical device at a certain instant.

- **Thermal switch**

Main cut-out and breaking device made up of a switch which opens automatically by thermal effect.

- **Differential switch**

Main cut-out and breaking device made up of a switch which opens automatically by differential effect.

- **Skilled person**

A person with technical know-how or sufficient experience to allow him to avoid the dangers inherent in electricity.

- **MASE specialised personnel**

A person able to evaluate the job assigned to him and recognise the possible dangers on the basis of training at the MASE training centres, with professional experience and knowledge of the equipment in question and of the possible dangers deriving in the event of negligent behaviour.

- **Supplier**

A body (e.g. manufacturer, agent, installer) which supplies the equipment or services relating to the machine.

- **Control**

Control action by which an output variable of the controlled system (controlled variable) is affected by an input variable of the controlling system in order to achieve a certain goal.

- **Manual control**

Control where the change of a variable handled is produced by a person through manual intervention.

- **Automatic control**

Control where the change of a variable handled is produced by a controlling device (automatic controller) without the intervention of a person.

- **Danger**

Source of possible harm or damage to health.

- **Protection**

Guard or protection device as safety measure to protect persons from a present or potential danger.

- **Casing**

Part intended to assure protection of the equipment against specific outside influences and protection in every sense against contacts.

GB**Connection in bad state**

The live parts are not fully covered with insulation removable by destruction only, the connections are not secure because of unstable tightening of the parts and a development of oxide between the parts.

- Direct contact

Contact of persons or animals with live parts.

- Control circuit

Circuit used to control machine operation.

- Equipment

General term which comprises materials, devices, equipment, accessories and similar used in conjunction with an electrical installation.

PRELIMINARY PRESCRIPTIONS

GB

FIELD OF EMPLOYMENT:

THE GENERATOR IS PROPER FOR TO PRODUCE IN WAY AUTONOMOUS ELECTRIC ENERGY IN THE LIMITS OF TENSION AND WATT DECLARED BY THE BUILDER



Consult this manual carefully before proceeding to the use and to any operation on the genset.

FAILURE TO RESPECT THE SPECIFICATIONS CONTAINED IN THIS USE AND MAINTENANCE MANUAL
WILL RESULT IN FORFEITURE OF THE GUARANTEE ON THE PRODUCT.

This manual was drawn up by the manufacturer and forms an integral part of the generator equipment, definition used as indicated in Directive 98/37/EC; the information contained in the manual is addressed to all the persons involved in the operating life cycle of the generator, and is necessary to inform both those who effectively carry out the different operations and those who coordinate the activities, to arrange the necessary logistics and to regulate access to the place where the generator will be installed and operated.

This manual was drawn up by the manufacturer with the purpose of providing essential information and instructions for proper use and maintenance in conditions of safety. It constitutes an integral part of the generator equipment and must carefully be protected from any agent which may damage it for the entire life cycle of the generator. The manual must accompany the generator if transferred to another user or owner.

It is opportune to remember the supplied generator group needs installation.
The technician will release, at the end of the work, a declaration to the meaning of the normative applied.

The manual defines the purpose for which the generator was constructed and contains all the information necessary to guarantee safe and proper use.
Constant observance of the instructions contained in this manual guarantees the safety of the operator, protection against damage to persons or things, operating economy and a longer life of the generator.

The drawings are provided by way of example. Even if the generator in your possession differs from the illustrations contained in this manual in elements of little significance, for example the colour, the safety of the generator and the information provided are nevertheless guaranteed.

To facilitate consultation, it has been divided into sections identifying the main concepts; for a quick look at the topics, consult the index.

Ongoing improvement and development of the product may have led to modifications to the generator which are not included in this publication.

Whenever a problem concerning the generator or this publication arises, consult with Mase Generators SPA for the latest information available.

1 GENERAL INFORMATIONS**1.1 CONFORM USE**

The generator is suitable for independent production of electrical energy within the voltage and wattage limits declared by the manufacturer.

Any other use outside the already stated field of use is prohibited: the generator is intended for marine use.

The generator has been designed to operate independently (without operator) if not for sporadic checks.

The limits of use are:

- operating temperature: -10° +40°
- relative humidity: 30% - 90%
- the generator is suitable for marine operation.

Installations are subject to approval by **mase** or by an installer authorised by **mase**.

Arbitrary modifications to the machine are prohibited for safety reasons.

Original spare parts must be used on pain of losing machine conformity.

All the operations that require dismantling of special parts may only be carried out by technicians authorised by the local dealer or the manufacturer.

Only **mase** technicians or personnel trained by **mase** have the necessary knowledge of the generator and the special equipment as well as the experience to carry out any operation in the most economical and reliable way.

1.2 RESIDUAL RISKS

The generator has been designed taking into account the safety regulations set out in the EC directives and standards; nonetheless, the following residual risks remain:

- injury caused by contact with hot parts during maintenance.
- injury caused by electrocution during maintenance on the electric panel.
- risks connected with long periods of exposure to the noise of the generator (with open cowling).
- risks due to contact with the generator lubricants during maintenance.
- risks due to the fire hazard the fuel represents.

Because of the typical intrinsic danger of the Generators, you are reminded that, although the generator has been designed, constructed and tested in accordance with the safety regulations, only proper and careful use can guarantee full safety; to this end, the various precautions to be taken during use of the Generator are listed below.

SAFETY INSTRUCTIONS

The electromechanics equipments, included the generating sets, switch, command electric equipments and accessories, can cause damages to people and, if they are installed, used or maintained with not qualified operations, they can put in serious danger the life of people. To avoid accidents is necessary to know the potential risks and operate with caution. Read and follow all the precautions and the instructions for the safety. PRESERVE THESE INSTRUCTIONS.

The manual shows varied typologies of precautions and instructions for the safety: Danger, Warning, Caution.

1.3 SAFETY SYMBOLS



Indicates that particular attention must be paid in order to prevent serious risks which could lead to death or possible harm to the health of personnel.



A condition which may occur during the lifetime of a product, system or plant considered at risk regarding damage to persons, property, the environment or economic loss.



Indicates that particular attention must be paid in order to prevent serious consequences which could result in damage to tangible goods, such as the resources or the product.

Other symbols on this manual



Particular important instructions








 

Indicates components and non inclusive parts with the base configuration.



Carefully consult this manual before using or carrying out any operation on the generator.







The routine maintenance operations, must be carried out by qualified personnel who have the appropriate equipment and protections.

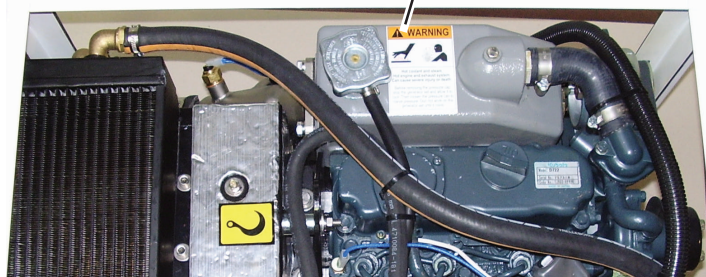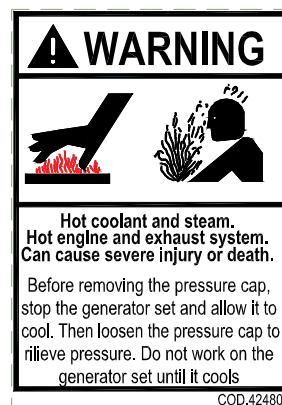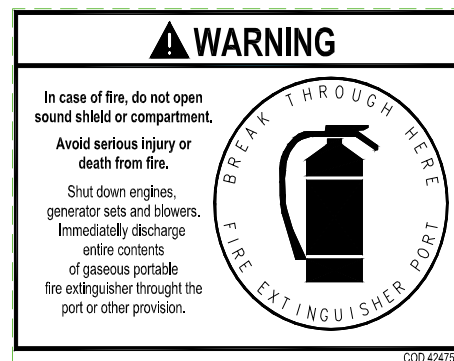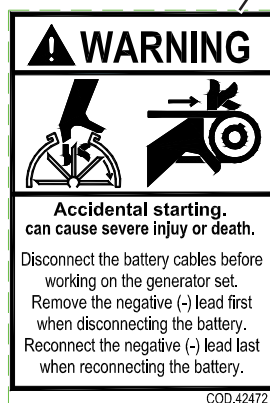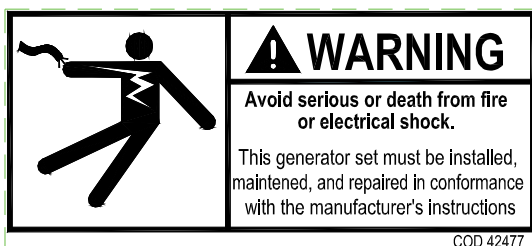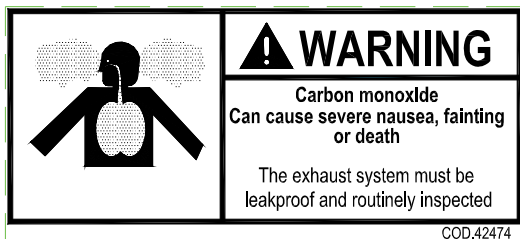


1.5 SAFETY LABEL INFORMATION

- These labels warn the user of any danger which may cause serious injury. Carefully read the meaning and the precautions described in this manual.
- If the label detaches or becomes illegible, replace it with a new one which can be requested from an authorised **mase** dealer.

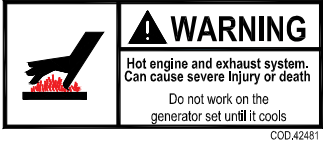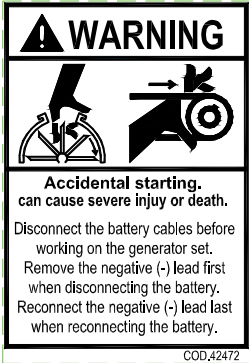Danger Symbols	Meaning
    	HOT PARTS Hot engine and exhaust system. Can cause severe injury or death. Do not work on generator set until it is allowed to cool. Servicing exhaust system. Hot parts can cause severe injury or death. Do not touch hot engine parts. An engine becomes hot while running and exhaust system components become extremely hot. ACCIDENTAL STARTING Accidental starting. Can cause severe injury or death. Disconnect battery cables before working on generator set. (Remove negative (-) lead first when disconnecting battery. Reconnect negative (-) lead last when reconnecting battery). Disabling generator set. Accidental starting can cause severe injury or death. Before working on the generator set or connected equipment, disable the generaset as follows: 1) Disconnect power to battery charger, if equipped. 2) Remove battery cables (remove negative (-) lead first). 3) Reconnect negative (-) lead last when reconnecting battery. Follow these precautions to prevent starting of generator set by the remote start/stop switch. Hazardous voltage. Moving rotor. Can cause severe injury or death. Operate generator set only with all guards and electrical enclosures in place. MOVING PARTS Rotating parts. Can cause severe injury or death. Do not operate generator set without all guards, screens, and covers in place. PREVENTING FIRE • Be sure to use the proper diesel fuel. • Be sure to stop the engine before refueling. • If you spill fuel, wipe off such spillage completely. • Never place oil or other flammable materials (such as straws, withered grass) close to the engine during running or shortly after shutting it down. • Check fuel oil and engine oil for leakage from their piping lines to cause fires.

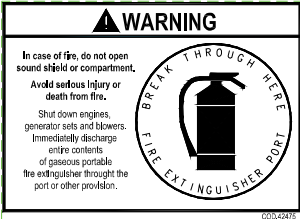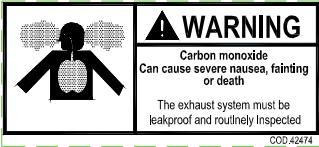Danger Symbols	Meaning
  	PREVENTING FIRE Can cause severe injury or death. • Start • Start the engine only from a starter switch without any load or in neutral position of the clutch of machine unit. The machine unit suddenly starts to move or generates power to cause serious personal injury. • Keep the machine unit sufficiently away from a building and flammable materials during engine running. It may cause fires due to hot exhaust gas and engine body. • Keep sparks, open flames or any other form of ignition (match, cigarette, etc.) away when fueling / refueling. Fire and or an explosion may result. FIRE Can cause severe injury or death. In case of fire, do not open the chest Extinguish the generator fire and immediately unload the whole content of the portable extinguisher through the hole indicated by the label. EXHAUST SYSTEM Carbon monoxide. Can cause severe injury or death. The exhaust system must be leakproof and routinely inspected. Carbon monoxide symptoms. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide is a poisonous gas which is present in exhaust gases. Inspecting exhaust system. Carbon monoxide can cause severe nausea, fainting, or death. In addition to routine exhaust system inspection, install a carbon monoxide detector. Consult your boat builder or dealer for approved detector installation. Inspect your detector before each generator set use. Test the carbon monoxide detector function per the manufacturer's instructions and keep it operational at all times. Installing exhaust system. Carbon monoxide can cause severe nausea, fainting, or death. In addition to routine exhaust system inspection, install a carbon monoxide detector. Use the following precautions when installing and operating generator set. Do not install exhaust outlet where exhaust can be drawn in through portholes, vents, or air conditioners. If the generator set exhaust discharge outlet is near the waterline, water could enter the exhaust discharge outlet and close or restrict the flow of exhaust.

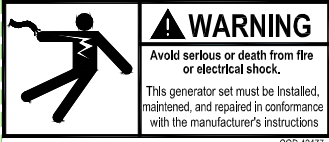Danger Symbols	Meaning
	EXHAUST SYSTEM Carbon monoxide. Group generator use. Carbon monoxide can cause severe nausea, fainting, or death. Carbon monoxide is an odorless, colorless, tasteless, non irritating gas, able to, if inhaled only also for brief time to provoke the death. Be especially careful if operating the generator set when moored or anchored under calm conditions as gases may accumulate. If operating the generator set dockside, moor the ccraft so that the exhaust discharges on the lee side (the side sheltered from the wind). Alway be aware of others-make sure your exhaust is directed away from other boats and buildings.
	HAZARDOUS VOLTAGE / ELECTRICAL SHOCK Hazardous voltage. Moving motor. Can cause severe injury or death.
	Operate generator set only with all guards and electrical enclosures in place. Grounding generator set. Hazardous voltage can cause severe injury or death. Electroconduction is possible whenever electricity is present. Open main circuit breakers of all power source before servicing equipment. Configure the installation to electrically ground the generator set and alectrical circuits when in use. Never contact electrical leads or appliances when standing in water or on wet ground, as the chance of electroconduction increases under such conditions. Disabling generator set. Hazardous voltage can cause severe injury or death. To disable the generating set from load, turn off the the automatic switch of the line or disconnect the output cables from the commutation switch and block the final part of cables. Hazardous voltage to load during an ispection cold cause severe damages to people and to equipment. Do not use the emergency button instead the automatic switch of the line. Battery short circuit. Explosion can cause severe injury or death. Short circuits can cause severe damages to people and/or equipment. Disconnect the battery before doing installation operations o generator set maintenances. Remove all jewels before doing maintenance on the maintenance. Remove negative (-) lead first when disconnecting battery. Reconnect negative (-) lead last when reconnecting battery. Never connect negative battery lead (-) to positive lead (+) of starting solenoid.

Danger Symbols	Meaning
 	BATTERY Do not touch the electrolytic battery acid Sufficient ventilation of the battery area. • Keep the area around the battery well ventilated, paying attention to keep sparks, open flame and any other form of ignition away. During engine running or charging battery, hydrogen gas is produced from the battery and can be easily ignited. Battery acid. Sulfuric acid in batteries can cause severe injury or death. Sulfuric acid in battery can cause permanent damage to eyes, burn, skin, and hole in clothing. Always wear splash-proof safety goggles when working near the battery. If battery acid is splashed in the eyes or skin, wash immediately the affected area with large quantity of clean water. Seek immediate medical aid in case of eyes contact. Do not intentionally make the battery spark by short-circuiting to check its remaining charge. It will cause fires. Make sure to use a gravimeter to check the remaining charge of the battery. If the battery electrolyte frozen, recharge the battery after warming up to thaw it.
 	SAFETY CLOTHING Do not expose your skin to high pressure fuel spray Be careful so as not to bring your skin in contact with high pressure fuel spray from broken fuel injection pipe to penetrate your skin to cause inflamed. If exposing to the spray should occur, obtain prompt medical treatment. Beware of dirt from air blowing Wear protective equipment such as goggles to protect your eyes when blowing compressed air or steam. Dust or flying debris can hurt eyes.

1.6 REFERENCE DOCUMENTS

The instructions for use provided with each generator are made up of a collection of documents of which this manual represents the General Part. The following documents are normally provided separate.

- a CE declaration of conformity.
- b Instruction manual for use and maintenance of the generators, (this manual).
- c Engine use and maintenance manual.
- d List of **mase** Service Centres.
- e **mase** Warranty certificate.
- f Warranty card.
- g EPA certificate (Engine manufacturing)

1.7 REFERENCE REGULATIONS AND LEGISLATIVE PROVISIONS

The generator groups, built by **mase**, destined to the countries of the European Community, are conforming to the applicable **EC** directives, and they are provided of a **EC** Declaration of Conformity.

EN 12601: Reciprocating internal combustion engine driven generating sets.

98/37/EC and subsequent amendments:
Essential machine requirements for safety and health protection ("Machine" directive).

73/23/EC and subsequent amendments contained in the directive **93/68/EC** : Guarantee of safety of electrical material intended for use within certain voltage limits, ("Low Voltage" Directives).


EN 60204.1: Electrical equipment of machines.

1.8 MARKING

The generator identification plate carries all the identification data in accordance with the provisions for **EC** marking for those cases where required. Below is a facsimile of the identification plate fixed on the hull of each generator.

1.9 IDENTIFICATION OF THE GENERATOR UNIT

- 1 - Machine name
- 2 - Machine code
- 3 - Serial number
- 4 - Rated power
- 5 - Declared frequency
- 6 - Rated power factor
- 7 - Rated voltage
- 8 - Rated current
- 9 - Degree of protection
- 10 - Class of isolation
- 11 - Temperature max. of use
- 12 - Altitude max. of use
- 13 - Performance class
- 14 - Year of construction
- 15 - Manufacturer - Address
- 16 - Weight

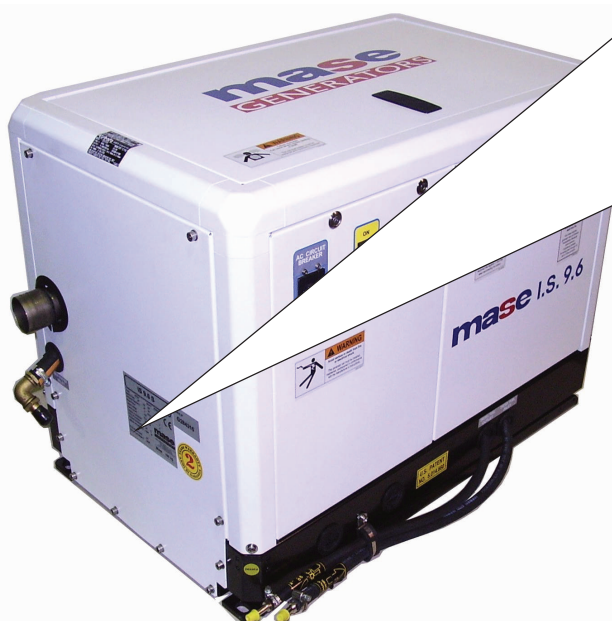

1				3			
2		Code		Serial n°			
4	Rated power 3F		KVA			CE	
5	declared frequency		Hz				
6	Rated power factor		cos.φ			mase GENERATORS	
7	Rated voltage		V		V		
8	Rated current		A		A	15 MASE GENERATORS SPA Via Tortona 345, 47023 Cesena (FC) Italy mase@masegenerators.com www.masegenerators.com	
9	Degrees of protection		IP				
10	Class of insulation					16 Mass Kg	
11	Temp. max of use		°C				
12	Altitude max. of use		m				
13	Performance class						
14	year of manufacture						

INFORMATION

The machine code number, the serial number and the year of construction must always be indicated when contacting the manufacturer for information, order of spare parts, etc..

2 GENERAL CHARACTERISTICS


The generators have been designed for use in the marine field, using highly reliable 1500/1800 rpm air/water-cooled diesel engines. Particular attention has been paid to the degree of protection against external agents, engine protection and protection of the electrical parts against overload or overheating, adopting automatic systems able to stop the generator in the event of malfunctioning.




The generator is particularly quiet thanks to an internally insulated soundproof casing and an advanced soundproof system for combustion smoke exhaust. The alternators used are the synchronous self-energized type.

2.1 COMPOSITION OF GENERATOR UNIT

The generator unit is essentially composed by the following components.

- 1 - Silent canopy
- 2 - Upper openable cowling
- 3 - Beside openable cowling
- 4 - Electric connection cowling
- 5 - Anchorage brackets
- 6 - Emergency switch
- 7 - Exhaust gas and cooling water connection
- 8 - Seawater intake connection
- 9 - Fuel tank connections
- 10 - Engine air filter
- 11 - Oil refill cap
- 12 - Oil dipstick
- 13 - Seawater pump
- 14 - Water/air radiator
- 15 - Starting motor
- 16 - rpm regulation screw
- 17 - Battery connection lead (+)
- 18 - Battery connection lead (-)
- 19 - Remote control panel connector
- 20 - Zinc anode
- 21 - Fuel pump filter
- 22 - Fuel pump
- 23 - Shock adsorber
- 24 - Oil filter
- 25 - Manual extraction oil pump
- 26 - Water/water heating exchanger
- 27 - Lifting hook
- 28 - Fuel filter
- 29 - Engine water refill cap

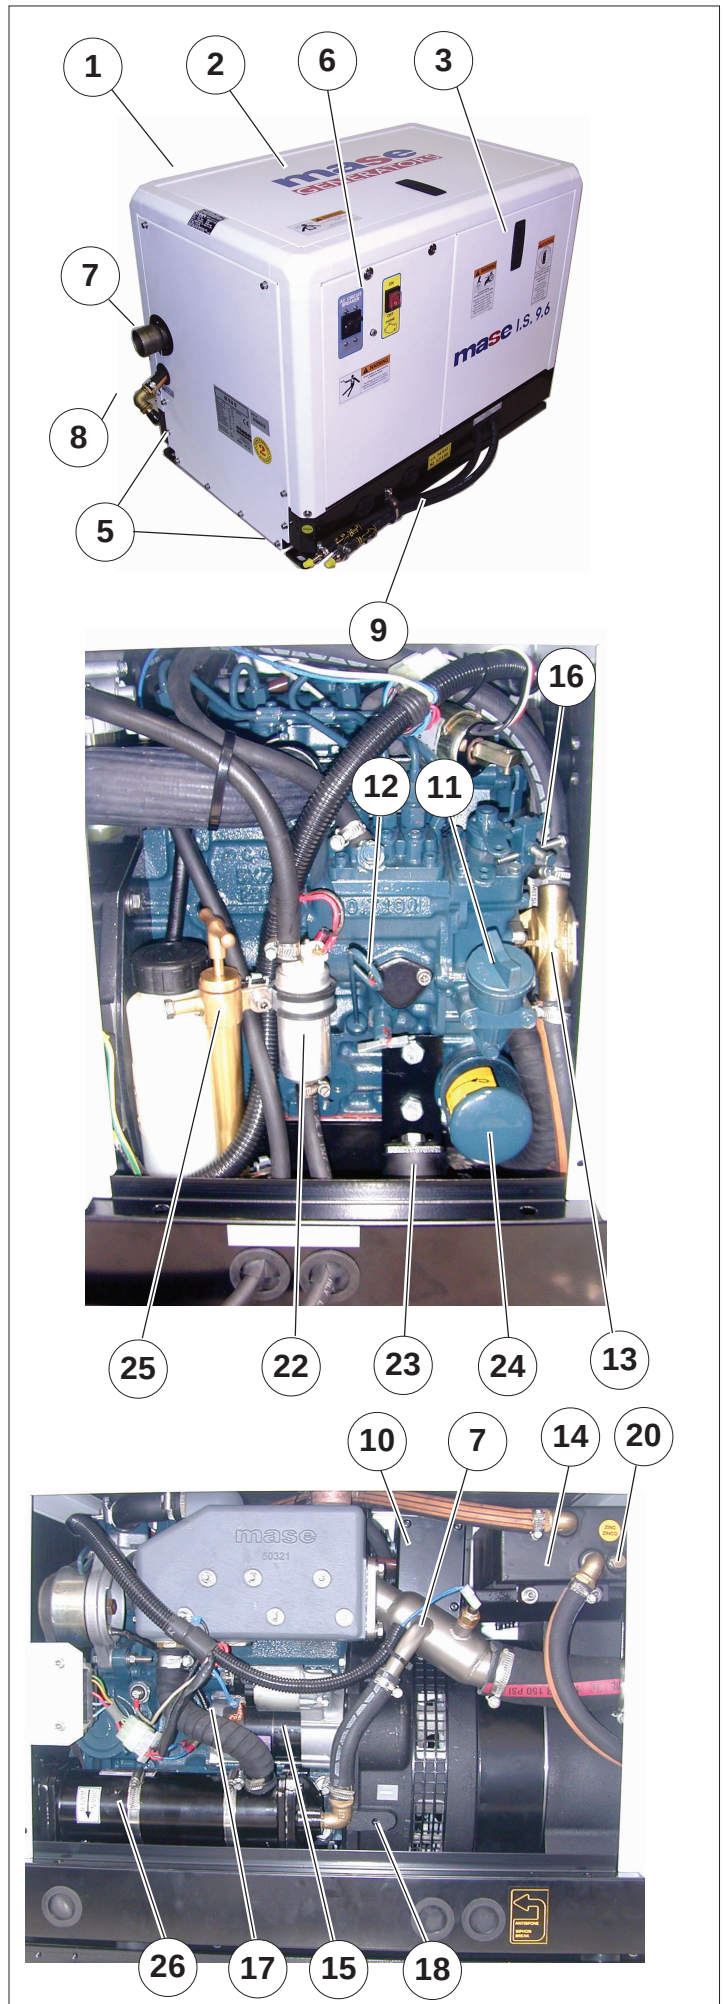


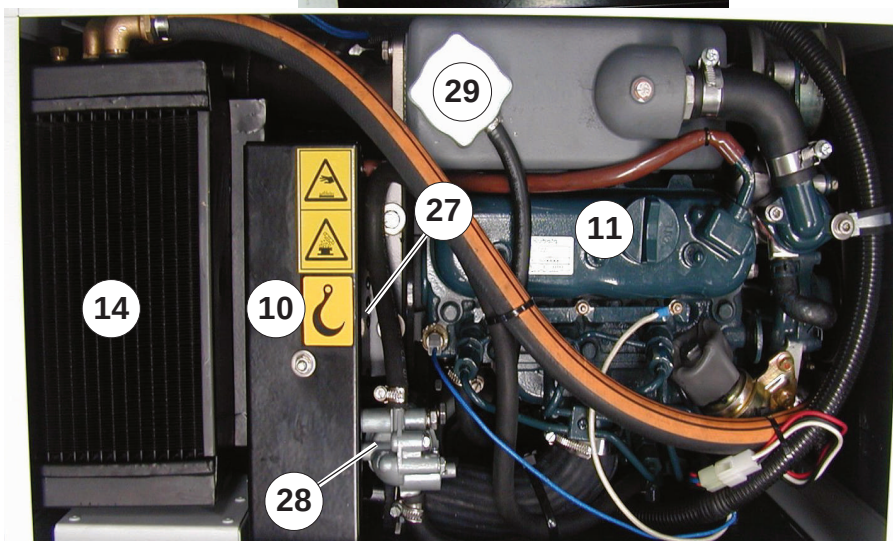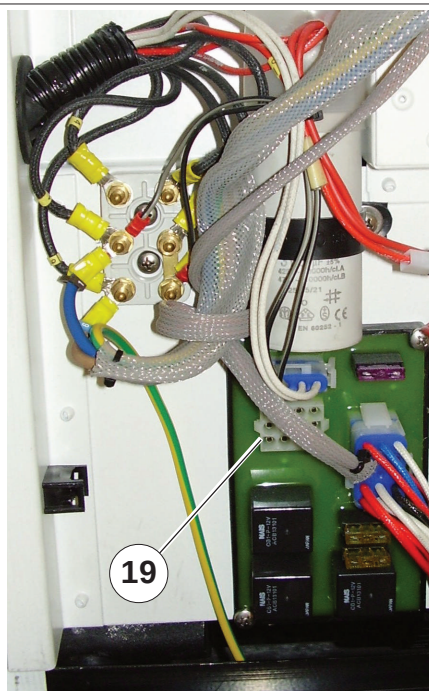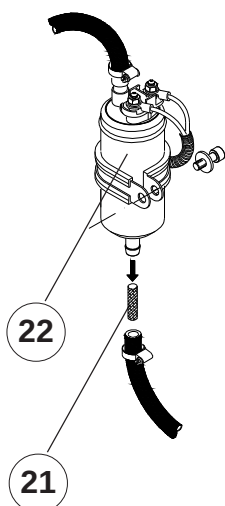

2.2 REMOTE COMMAND AND CONTROL PANEL (STANDARD VERSION)

Each generator is fitted with an instrument panel for commands and controls with the following components:

- 1) STARTBUTTON
- 2) STOPBUTTON
- 3) MENU NAVIGATIONBUTTON
- 4) MENU NAVIGATIONBUTTON
- 5) MENU SELECTIONBUTTON
- 6) DISPLAY

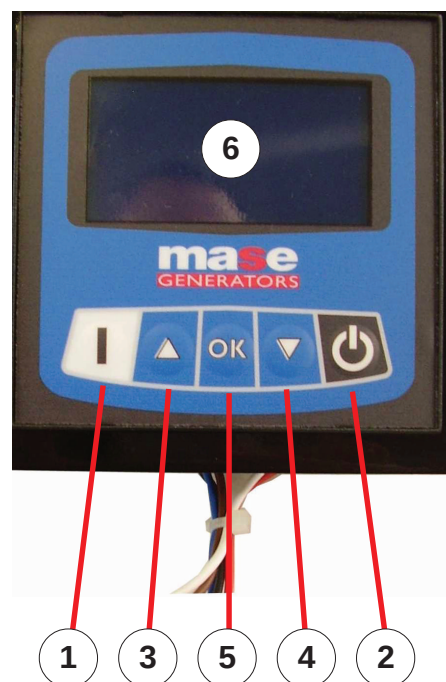

2.3 TECHNICAL CHARACTERISTICS TABLE

GB

MODEL		IS 9.6	
GENERAL FEATURES			
MAX POWER (LTP) ¹		9,6	kW
CONTINUOUS POWER (PRP) ²		8,8	kW
POWER FACTOR (Cos Φ)		1	
RATED VOLTAGE		120 - 240	V
RATED FREQUENCY		50	Hz
GRADE OF PROTECTION		IP 23	
MAX TEMP. OF USE		40 - 104	°C - °F
MIN TEMP. OF USE		-5 - 23	°C - °F
MAX ALTITUDE OF USE		1000 - 3281	m - ft
MAX INCLINATION DURING USE (PERIODICAL 3 min)		30°	
MAX TILT OF USE (CONTINUOUS)		20°	
PORTATA POMPA ACQUA MARE		20 - 5,3	L/min - gal/min
DIMENSIONS	L	730 - 28,5	mm - in.
	W	468 - 18,3	mm - in.
	H	555 - 22	mm - in.
MASS		185 - 407	kg - lbs
ENGINE			
TYPE		4 STROKE	
MANUFACTURER		KUBOTA	
MODEL		D722	
DISPLACEMENT		719 - 44	cm ³ - in ³
MAX POWER		16,6 - 12,3	HP - kW
n° OF CYLINDERS		3	
CYLINDERS / HEAD MATERIAL		ALLUMINIUM	
RATED SPEED		3600	rpm
SPEED CONTROL		CENTRIFUGAL / MECCANICAL	
INDUCTION SYSTEM		NATURAL	
FUEL		DIESEL	
INJECTION SYSTEM		INDIRECT	
FUEL FEEDING PUMPS		ELECTRIC	
MAX PREVALENCE FUEL PUMP		700 - 27,5	mm - in.
FULL LOAD CONSUMPTION		3,2 - 0,84	L/h - gal/h
COOLING		AIR / WATER	
LUBRIFICATION SYSTEM		FORCED	
OIL SUMP CAPACITY		3,8 - 0,95	L - gal
COMBUSTION AIR VOLUME		860 - 30	m ³ /min - cfm
ELECTRIC PLANT		12 (negative pole to ground)	V
STARTING		ELECTRIC	
STARTING MOTOR		12 - 0,7	V - kW
STARTING BATTERY		12 - 45	V - Ah
BATTERY CHARGER		12 - 10	V - A
STOPPING SYSTEM		SOLENOID	
ALTERNATOR			
TYPE		SYNCHRONOUS	
n° OF POLES		2	
MAX CURRENT		80 - 40	A
ISOLATION CLASS		H	
VOLTAGE REGULATOR		CAPACITOR	
FREQUENCY STABILITY		± 5%	
COOLING		AIR	

⁽¹⁾ Limited - time running power (LTP) ISO 8528-1

It is the maximum power that, under the environment conditions established by the norm ISO 3046/1, the generator group it is able to disburse for a maximum of 500 hours for year, of which a maximum of 300 hours among the interval of maintenance prescribed by the builder. It is accepted the operation to this power conditions the duration of the group.
An overload of the 10% is admitted only for regulation.

⁽²⁾ Prime power (PRP) ISO 8528-1

It is the available maximum power for a variable power cycle that the generator group is able to disburse for a boundless number of hours for year among the interval of maintenance prescribed by the builder and under the environment conditions established by the norm ISO 3046/1. The middle power during a period of 24 hours, doesn't have to exceed 80% of the PRP.
An overload of the 10% is admitted only for regulation.

3 INSTALLATION

⚠ DANGER


The generator may only be installed by qualified technicians. Malfunctioning due to improper installation may cause injury or death.

3.1 GENERATOR HOUSING CHARACTERISTICS

- The generator must be installed in a sufficiently ventilated room able to assure the small amount of air required for engine combustion.
- The room must be acoustically separated and isolated from the living quarters.

- The generator must be positioned in such a way as to facilitate normal maintenance operations.
- It is advisable to install the generator in the propulsion engine room provided that it meets the above conditions.
- The air must be clean.
- The air temperature in the place of installation must be between -5°C (23°F) and +40°C (104°F).
- The relative humidity must not exceed 50% at a maximum temperature of +40°C. Relative humidity of 90% at +20°C (68°F) and 100% at +25°C (77°F) is permissible.

GB

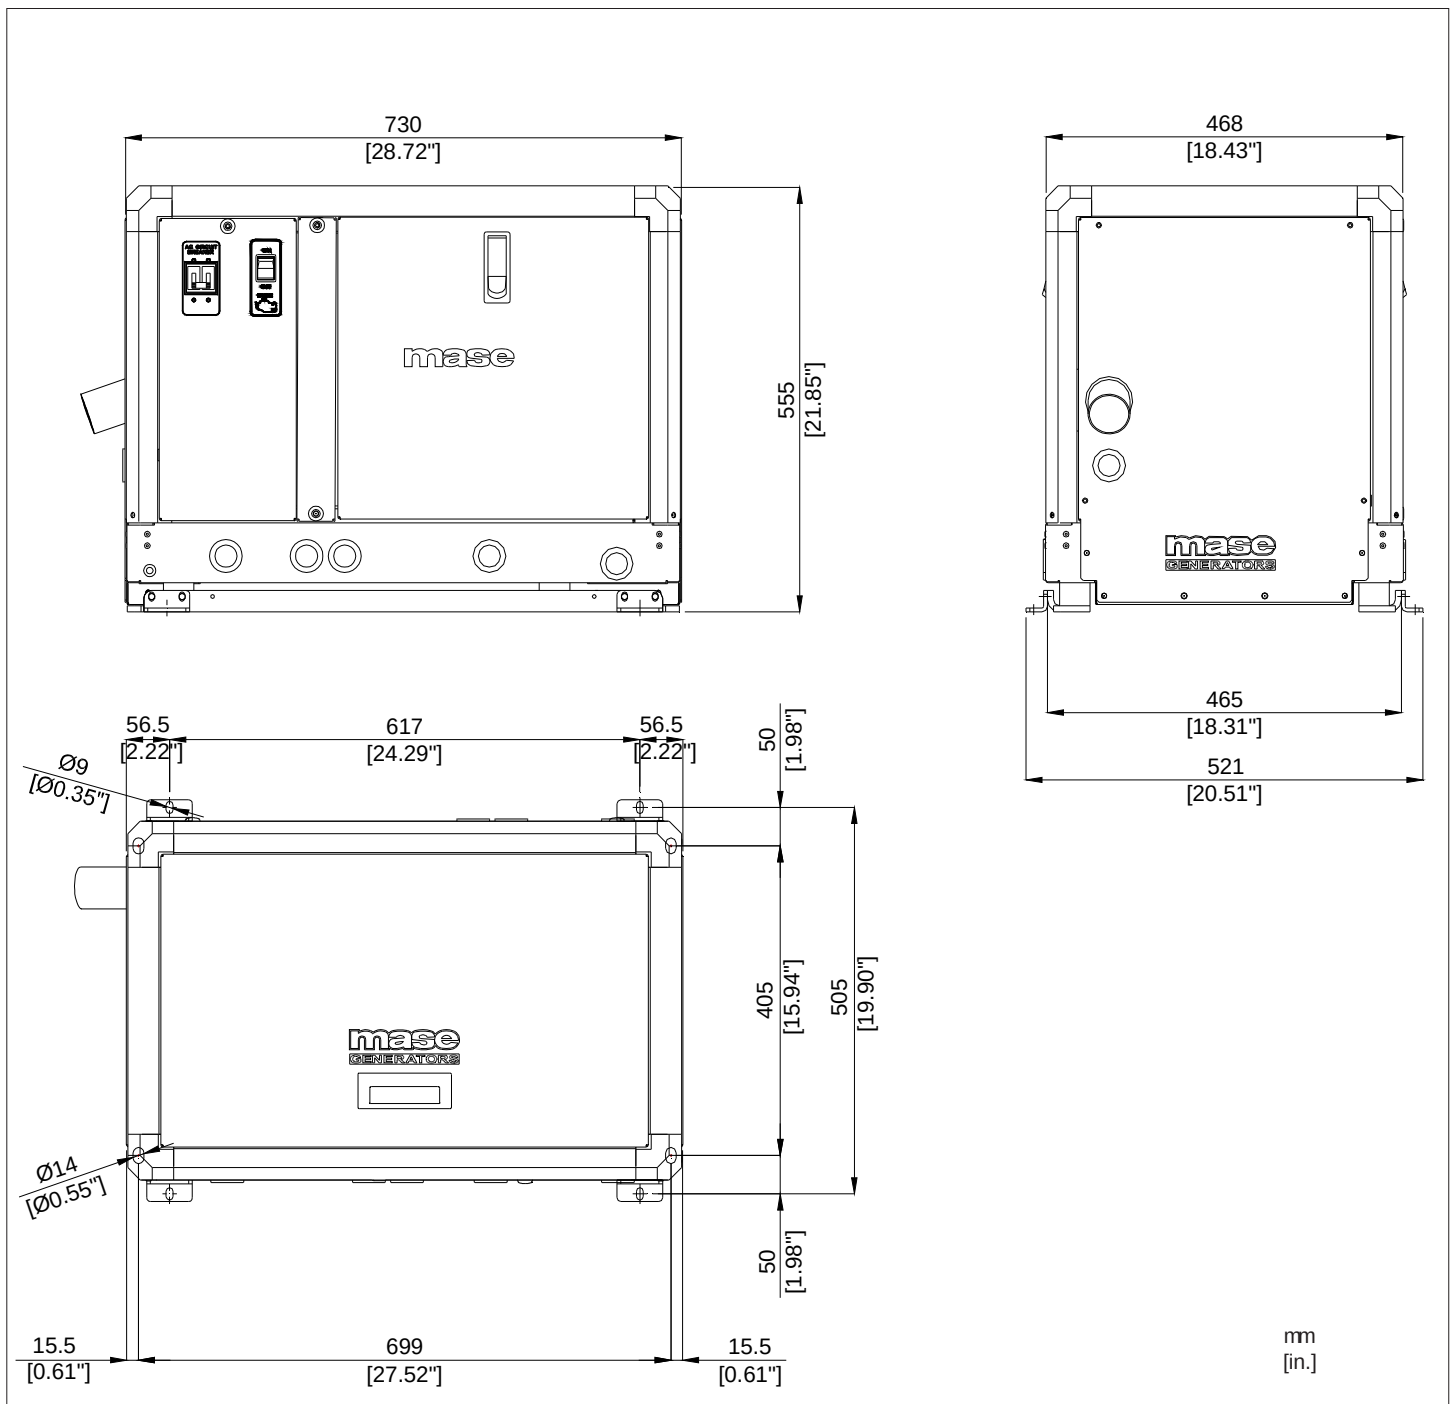

GB

3.2 LIFTING

Follow the procedure on **Chap.7** to lift the generator.
The fixing hole for the hook is indicated on picture (ref.1).

3.3 ANCHORING THE GENERATOR

To anchor the generator, arrange a base to support the weight and vibrations.
Drill holes in the base as shown on layout drawing.

3.4 VENTILATION

The generator is equipped with an internal forced cooling system through a water/air exchanger.
The amount of air required for combustion is aspirated through the intake located on the base (ref.2):
Therefore, always check that this intake is free of any obstruction.

3.5 COOLING WATER CIRCUIT

The generator engine is cooled by water inside a closed circuit, through a cooler (ref.3) and sea water.

⚠ CAUTION

Use 4 L of water mixed with coolant at 50 %.

At the time of installation, a seawater feed circuit must be arranged for cooling, and an exhaust system for the combustion gas and water mixture.

3.5.1 SEAWATER FEED SYSTEM

Two water intake systems are normally adopted on boats:

- Direct intake system (ref.4).
- System with baffle (ref.5).

mase recommends using the direct intake system (ref.3), since it prevents intake of pressurised water into the intake ducts, instead generating a vacuum easily overcome by the water pump head of the generator.




⚠ CAUTION

Do not fit any type of protection cap on the direct intake system.

The system with baffle (ref.5), on the other hand, may cause the following problems:

a- If mounted with the slots facing the bow:
In this case, during navigation and with the generator off, pressure is created in the water intake duct, which may cause the system to fill up until reaching the exhaust port, thus making it possible for water to enter the cylinders.

b- If mounted with the slots facing the stern:
In this case, during navigation a vacuum may be created in the water intake duct such as to inhibit the water pump to activate the cooling system or such as to limit the flow rate with consequent overheating of the generator.

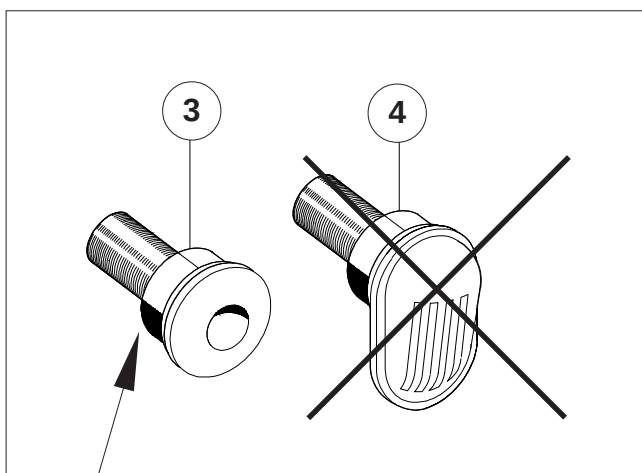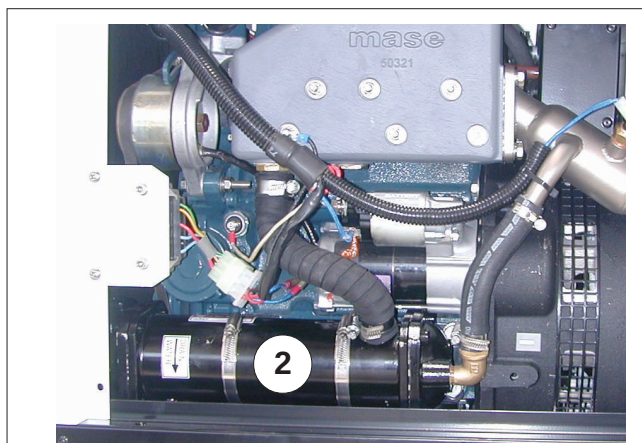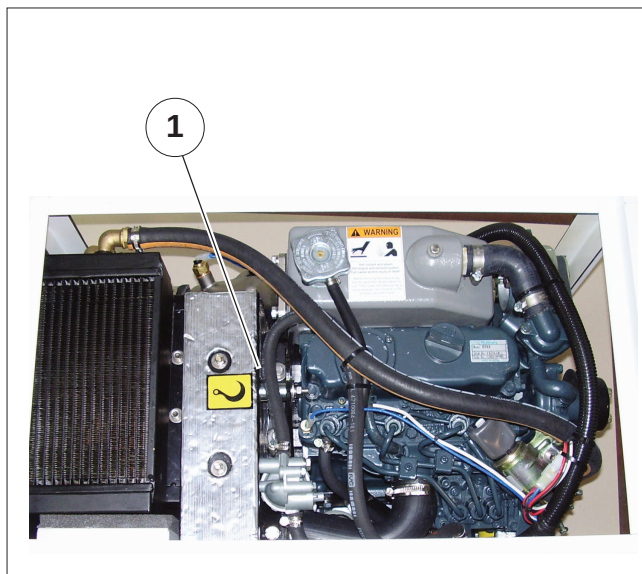

3.5.2 COMPONENTS

⚠ CAUTION

If the generator is installed at a height over 1m (3,3ft) above the waterline, a check valve (ref.2) must be fitted after the seawater intake to prevent the water circuit from emptying out when the engine is off. If the circuit is empty, the water pump impeller may be damaged during starting.

For the same reason, when starting the generator for the first time, manually prime the intake pipe leading from the valve to the pump.

- 1/2" direct seawater intake (ref.1).
- 1/2" ball cock (main system) (ref.3).
- 1/2" ball cock (system bleeding) (ref.4).
- Serves to drain the cooling system of the generator for general maintenance or for long periods of inactivity.
- Water filter (inspectable) (ref.5).
- It protects effectively the cooling circuit against intake of mud, sand and seaweed.

i INFORMATION

The filter mesh must be the fine type, it is advisable to use the type with 2-470µm (micron) pitch. Different sizes would not allow good filter efficiency.

- Antisiphon valve (ref.6): this valve brings the cooling circuit to atmospheric pressure when the engine is off, preventing the siphonage phenomenon.

It must be used when the base of the generator is under the water line, and must be positioned at least 500mm (1.6ft) above sea level.


i INFORMATION

The drain pipe of the antisiphon valve must be positioned under the valve thus preventing water from accumulating in the pipe which must always remain empty to allow air to pass through it when the generator is switched off.


It is advisable to run the drain pipe through the bilge, as small amounts of water may flow from it during normal operation.

Holes have been made in the casing to connect the antisiphon valve (ref.7).


OPTIONAL

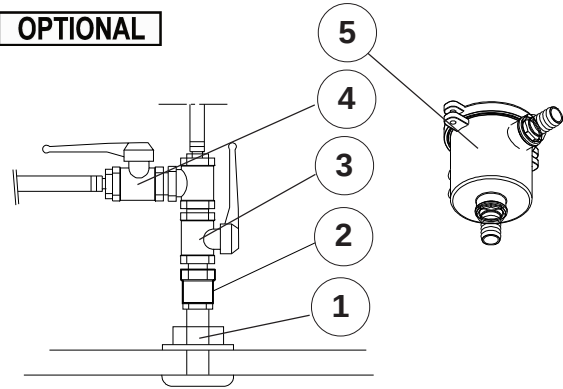

OPTIONAL

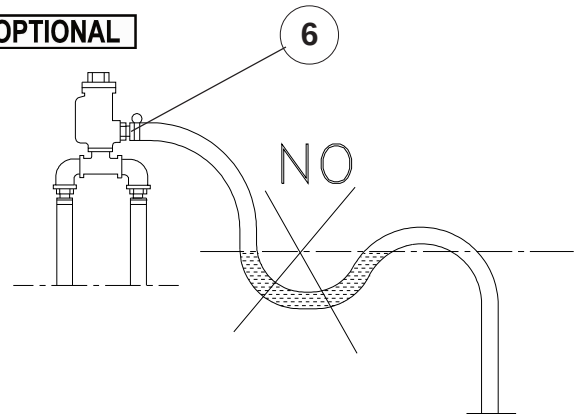

OPTIONAL

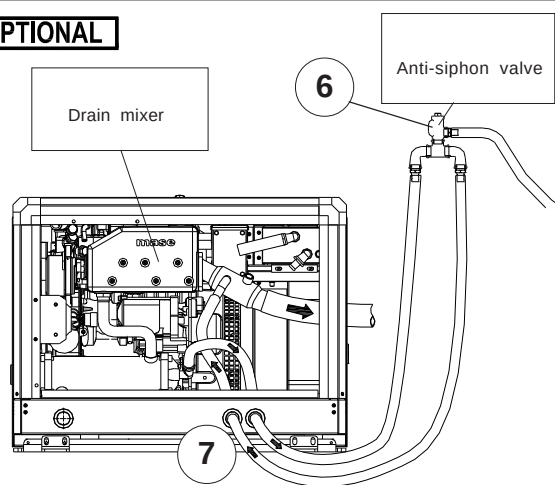

OPTIONAL



GB

1) Sea drainage nozzle
2) Silencer
3) Barrel muffler
4) Water filter
5) General tap-water
6) Sea intake
7) Tap to drain system
8) Fuel inlet / outlet

A= $\varnothing$ 50 [1.96"]
B= $\varnothing$ 16 [0.63"]
C= $\varnothing$ 16 [0.63"]
D= $\varnothing$ 16 [0.63"]
E= $\varnothing$ 8 [0.31"]


THE DIMENSIONS ARE IN mm
THE DIMENSIONS ARE IN [inch]

1) Sea drainage nozzle
 2) Silencer
 3) Barrel muffler
 4) Water filter
 5) General tap-water
 6) Sea intake
 7) Tap to drain system
 8) Anti Siphone valve
 9) Drainage pipe
 10) Fuel inlet / outlet


A= ϕ 50 [1.96"]
 B= ϕ 20 [0.78"]
 C= ϕ 20 [0.78"]
 D= ϕ 16 [0.63"]
 E= ϕ 14 [0.55"]
 F= ϕ 8 [0.31"]

THE DIMENSIONS ARE IN mm
 THE DIMENSIONS ARE IN [inch]


TYPICAL INSTALLATION WITH GENERATOR ABOVE THE WATERLINE WITH mase WATER/GAS SEPARATOR

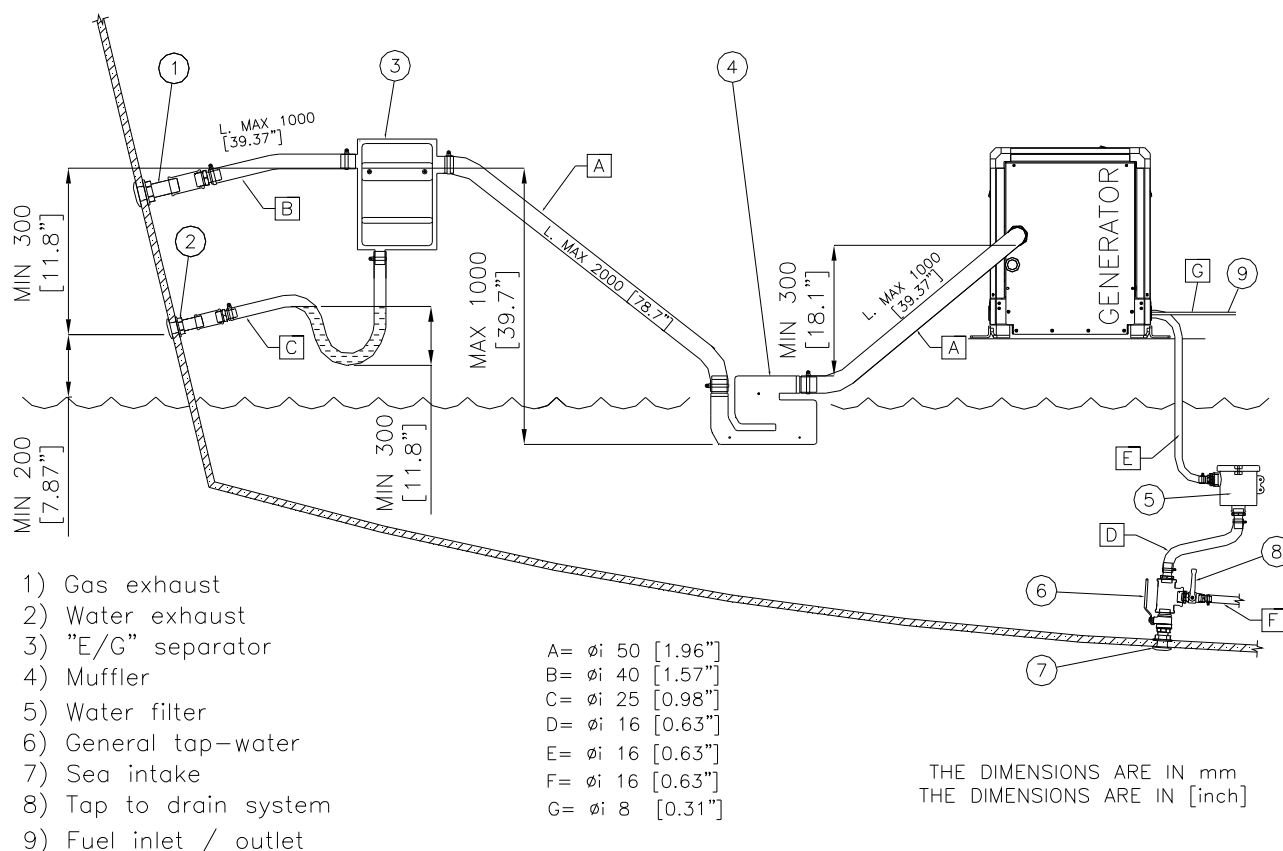

TYPICAL INSTALLATION WITH GENERATOR UNDER THE WATERLINE WITH mase WATER/GAS SEPARATOR

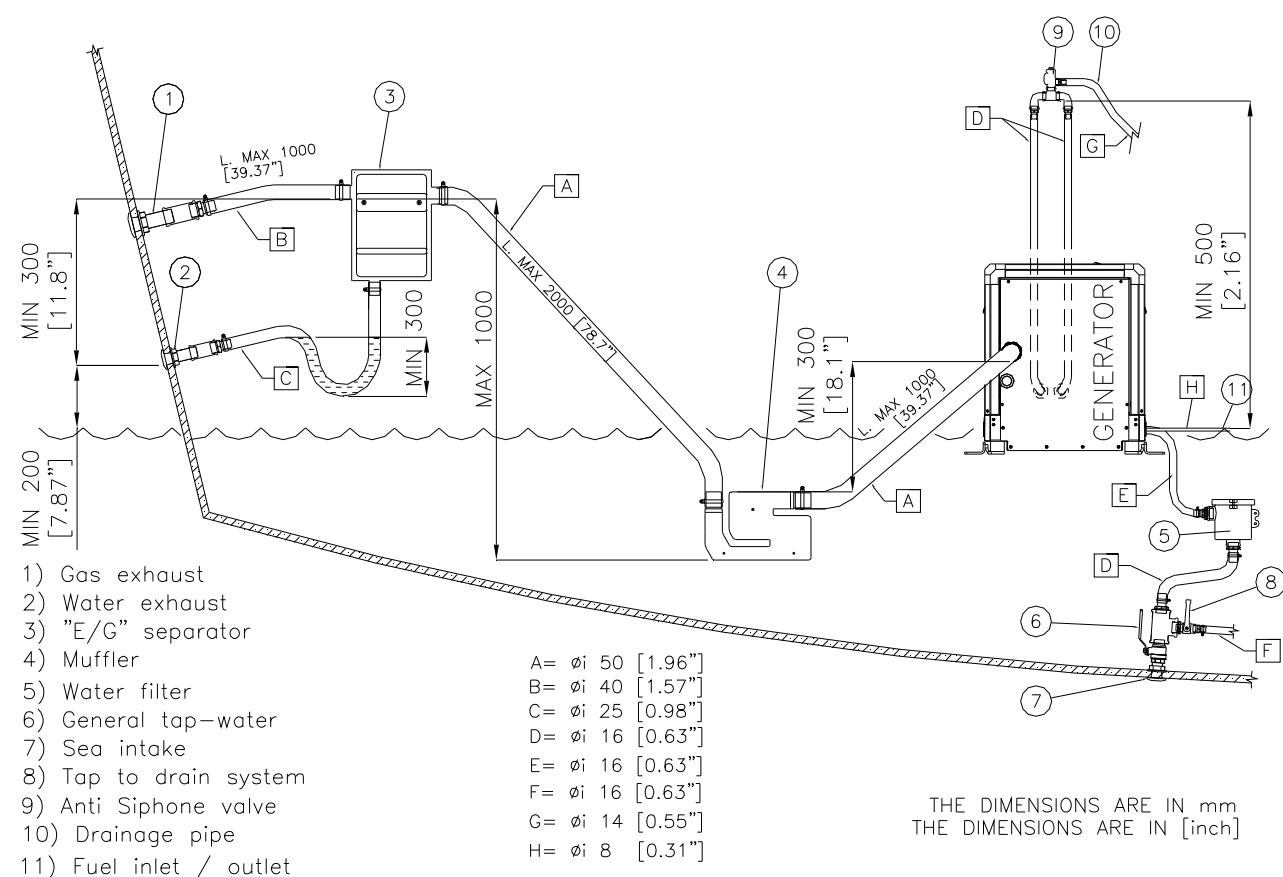

TYPICAL INSTALLATION WITH GENERATOR ABOVE THE WATERLINE WITH GENSEP WATER/GAS SEPARATOR

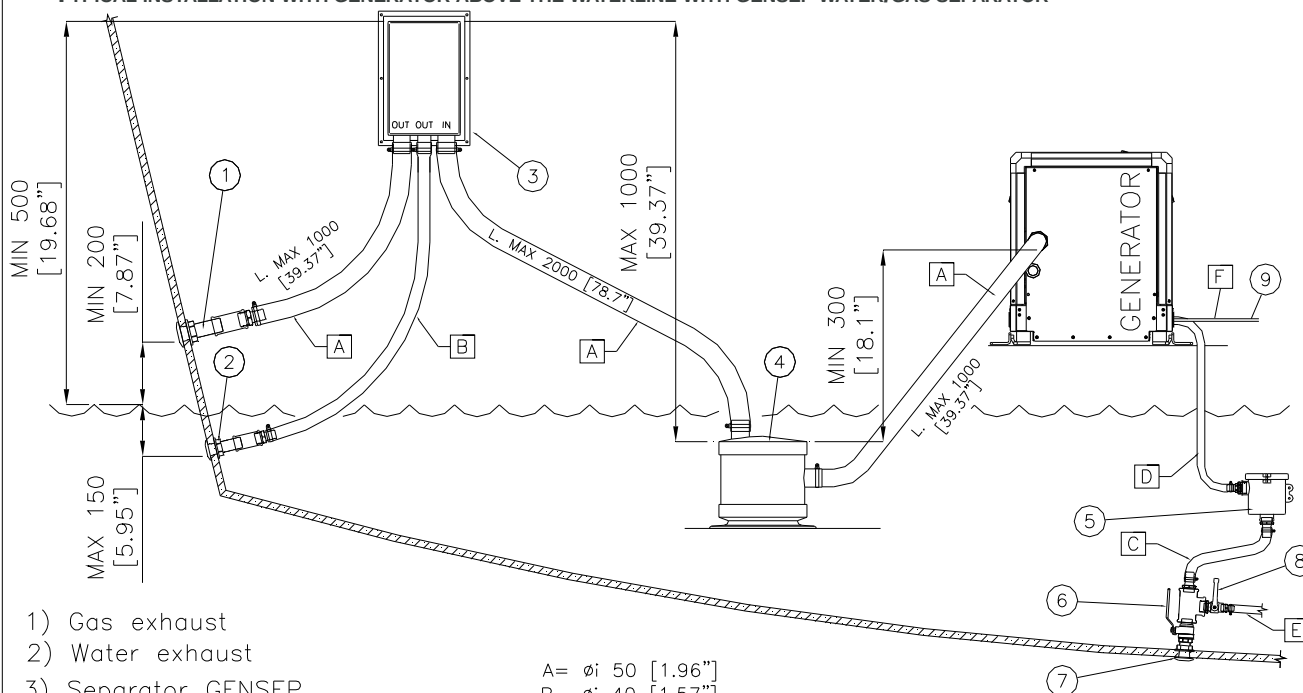


- 1) Gas exhaust
- 2) Water exhaust
- 3) Separator GENSEP
- 4) Muffler VERNALIFT
- 5) Water filter
- 6) General tap-water
- 7) Sea intake
- 8) Tap to drain system
- 9) Fuel inlet / outlet

A = ϕ 50 [1.96"]
 B = ϕ 40 [1.57"]
 C = ϕ 16 [0.63"]
 D = ϕ 16 [0.63"]
 E = ϕ 16 [0.63"]
 F = ϕ 8 [0.31"]

THE DIMENSIONS ARE IN mm
 THE DIMENSIONS ARE IN [inch]

TYPICAL INSTALLATION WITH GENERATOR UNDER THE WATERLINE WITH GENSEP WATER/GAS SEPARATOR

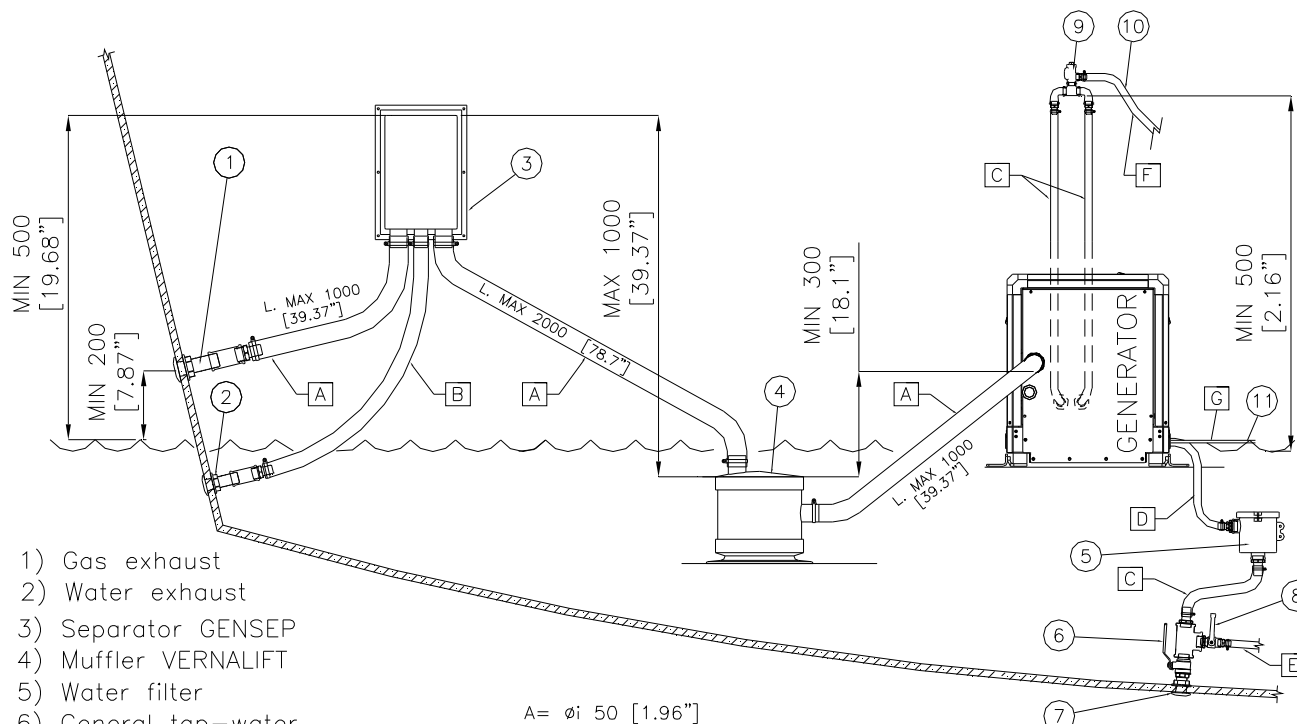

- 1) Gas exhaust
- 2) Water exhaust
- 3) Separator GENSEP
- 4) Muffler VERNALIFT
- 5) Water filter
- 6) General tap-water
- 7) Sea intake
- 8) Tap to drain system
- 9) Anti Siphone valve
- 10) Drainage pipe
- 11) Fuel inlet / outlet

A = ϕ 50 [1.96"]
 B = ϕ 40 [1.57"]
 C = ϕ 16 [0.63"]
 D = ϕ 16 [0.63"]
 E = ϕ 16 [0.63"]
 F = ϕ 14 [0.55"]
 G = ϕ 8 [0.31"]

THE DIMENSIONS ARE IN mm
 THE DIMENSIONS ARE IN [inch]

3.5.5 EXHAUST SYSTEM

The generator combustion gas/water exhaust system must be independent of that of the main engines (see installation diagrams).

⚠ CAUTION

The pipe length from the highest point of the exhaust pipe to the exhaust must not exceed 2 m. This is to prevent that when the generator is switched off, the water that is left in the exhaust pipe flows back to the engine after having filled the barrel exhaust.

Barrel exhaust (capacity 3.5L, 0.92 gal).

Attenuates the exhaust noise and prevents water backflow to the engine. It is recommended to install the exhaust not more than 1 m from the generator and to position it at a height equal to or lower than that of the generator base.

Silencer


Further reduces the noise. It is recommended to install it at a distance of not more than 1 m from the sea exhaust union.

Sea exhaust union.

It must be installed in such a position that it is always above sea level.

Water/gas separator

Separates the water from the gas reducing the noise at the exhaust and eliminating the typical pulsating effect of water mixed with gas.

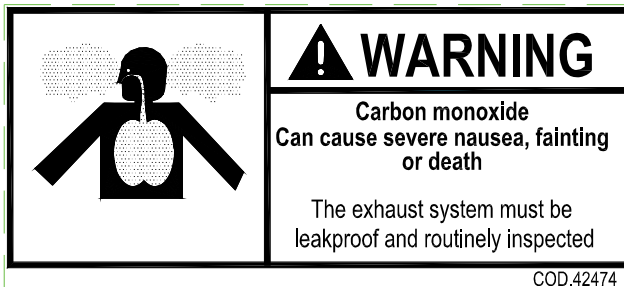

Carbon monoxide may cause strong nausea, fainting or death. Do not use copper pipes in diesel exhaust systems. The sulphur contained in diesel exhausts causes deterioration of the system leading to exhaust gas or water leaks.

Carbon monoxide may cause strong nausea, fainting or death.


For the safety of the boat occupants, install a carbon monoxide detector.

When installing the generator or carrying out maintenance operations, adopt the following precautions:

Do not install the exhaust gas outlet pipes in places where the gasses may be conveyed through the portholes, vents or air conditioning system. If the exhaust gas outlet is near the water level, water may enter the exhaust gas outlet and block or limit the gas flow.


OPTIONAL

Muffler

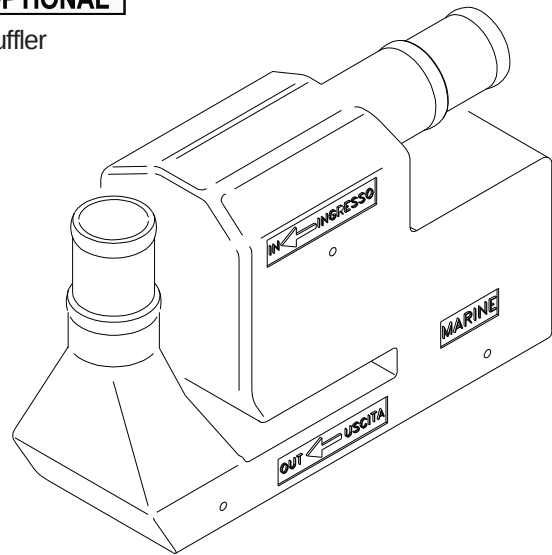


OPTIONAL

Silencer + Sea exhaust union

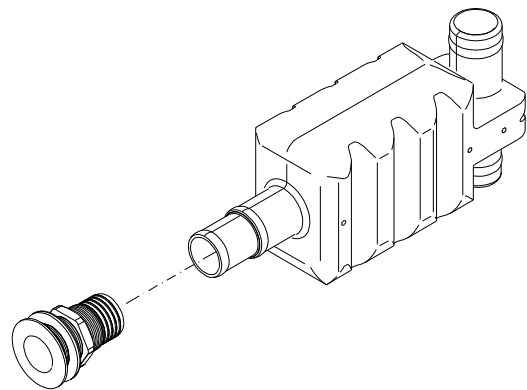

OPTIONAL

Water/gas separator + Sea exhaust union

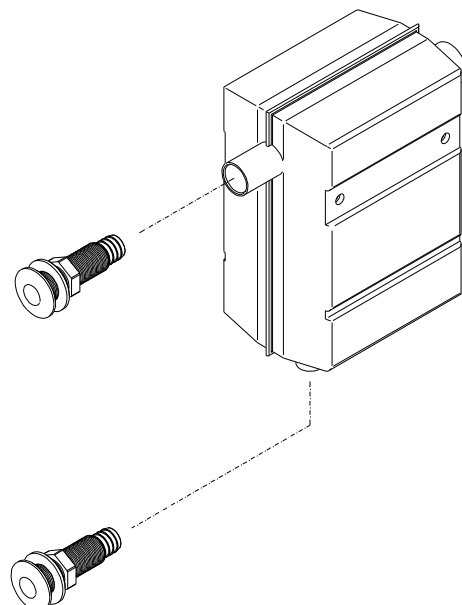

GB

GB

3.6 FUEL CIRCUIT


The generator is diesel-powered by means of the unions marked "**DIESEL FUEL INLET**" (rif.1) e "**DIESEL FUEL OUTLET**" (rif.2).

The latter serves to return excess fuel.


The fuel pipes must be in hydrocarbon-resistant rubber with an inside diameter of 8mm (0.31in).

For differences in level of more than 500mm (19.6in), fit a single-acting check valve in order to prevent the fuel system from emptying out.

Use a valve with 50mbar opening.

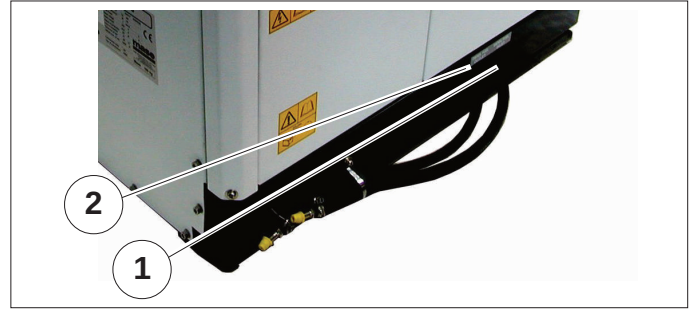**3.6.1 FUEL FILTER**

The generating group is provided of fuel filter installed inside the genset (ref.3).

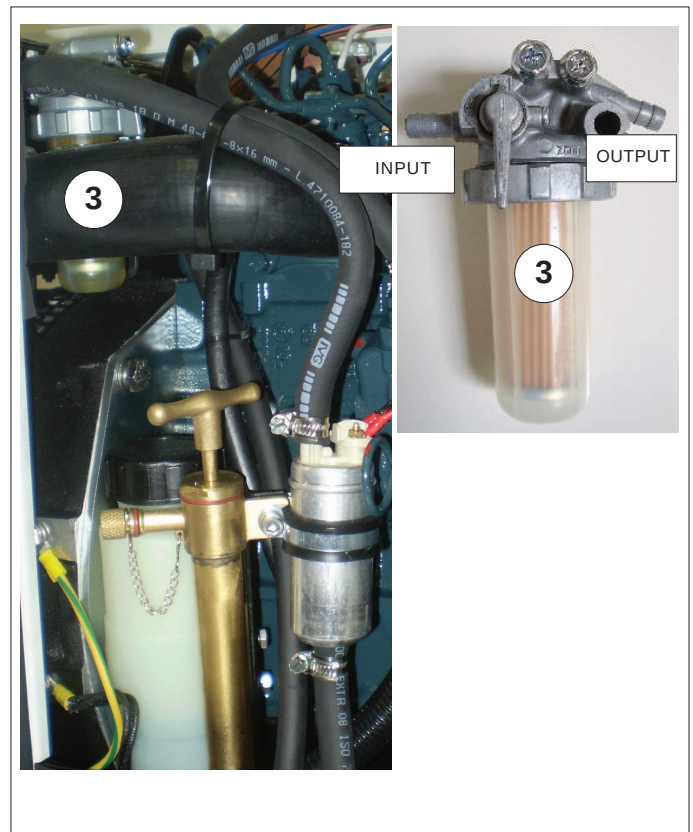**3.6.2 ELECTRIC PUMP**

The electric pump is equipped with a protective filter (ref.5).


⚠ CAUTION

The electric pump is cooled and lubricated with the fuel. Do not activate the pump without fuel in order not to damage it.

i INFORMATION

The generator is equipped with an automatic fuel bleed valve.

Should manual bleeding be necessary, press the ON button on the control panel and wait 30 seconds before starting the generator.

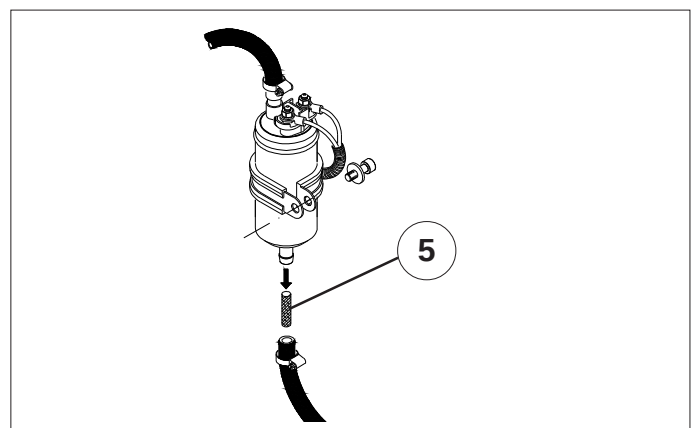

3.7 ELECTRICAL CONNECTIONS

3.7.1 BATTERY CONNECTION

Use a 12V stand-alone battery to start the generator. Connect it to the generator terminals using cables of 25mm² cross-section for a distance up to 5m (16.4ft) or cables of 35mm² cross-section for longer distances, following this sequence of operations:

- First connect the positive pole (+) of the battery to the terminal marked + on the generator (**ref.1**) (starter motor).
- Then connect the negative pole (-) of the battery to the terminal marked - on the generator (**ref.2**).
- Spread some specific mineral grease on the connectors in order to reduce oxidation or corrosion.

The generator is equipped with an automatic electronic recharging device for the starter battery, able to deliver 10A at a voltage of 12V at full power.



⚠ WARNING

Install the battery in a ventilated housing separate from the generator and any device which may cause heat or sparks. Periodically check the state of the terminal connections and the battery water level. If necessary, disconnect the cables working in reverse order from connection.

Do not invert the polarities of the connection cables, as the generator and the battery may be seriously damaged.

i INFORMATION



Do not connect any other loads to the battery. In order to minimise galvanic currents, the (-) of the generator battery must not be connected to the (-) of the other batteries on board.

3.7.2 CONTROL PANEL CONNECTION



The generator can be connected with a connector (**ref.3**) to the remote starting panel (with 20 meters [80 inch] of cable), supplied by **mase** as an optional, and can be installed on the dashboard. Secure the cable to the plastic support (**ref.4**) using hose clamps.

⚠ WARNING

When carrying out maintenance operations on the generator, disconnect the negative pole of the starter battery to prevent accidental starting.

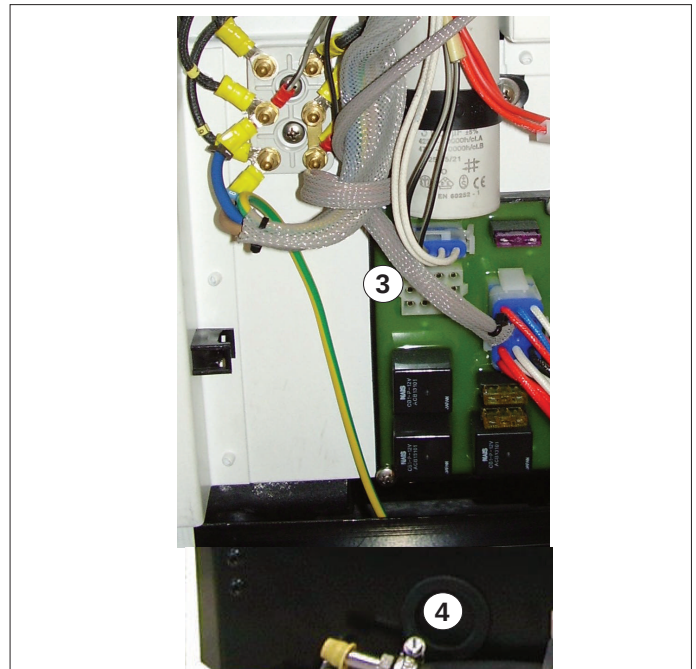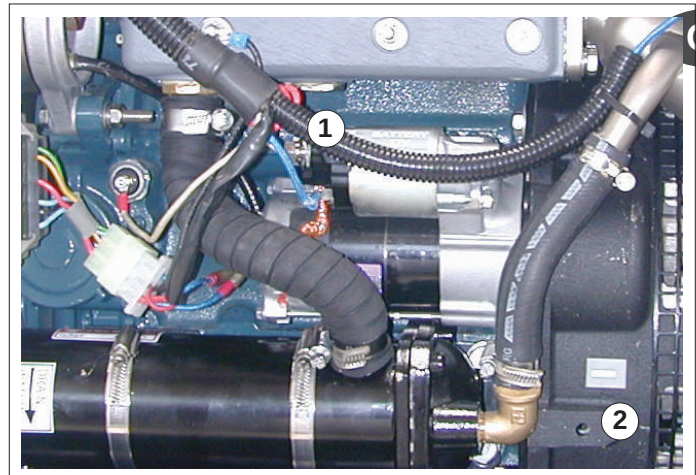

OPTIONAL

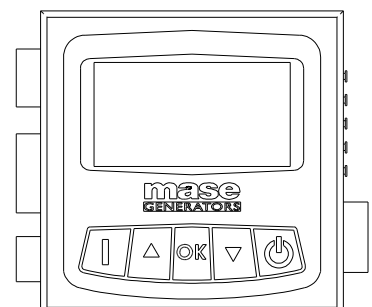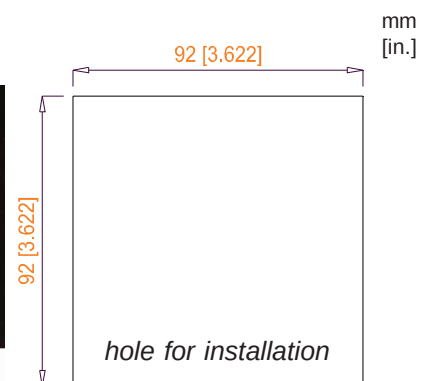

GB

⚠ CAUTION

The control panel must necessarily be installed as it is essential for generator operation.

Do not use devices different from the control provided with the generator, since they may be incompatible with the generator.

Make the connection with the battery detached.

The control panel is supplied with a 10 m long connection cable.

Do not modify this cable as it may cause improper functioning of the panel circuit.

3.7.3 A.C. CONNECTION

This connection can be made by means of the power terminal board (ref.1).

**⚠ WARNING**

Generator earthing. High voltage may cause serious injury or death.

Electroconduction is possible whenever electricity is present.

De-energise the main magnetothermal switches of all the power outputs before repairing the equipment. Configure the installation for earthing of the generator and the electrical circuits when in use.

Avoid contact with the electrical conductors or equipment when standing in water or on wet ground, since there is a higher risk of electroconduction in these conditions.

⚠ WARNING

Short-circuits. High voltage may cause serious injury or death.


Short-circuits may cause physical injury and/or damage to the equipment. Avoid contact with the electrical connectors through tools or jewellery. Take off wrist watches, rings or any other jewellery before working on the electrical circuits.

⚠ WARNING

Feedback to utility. Feedback voltage may cause serious injury or death.

Connect the generator to the electrical system of the structure/boat only through an approved electrical system and after opening the main switch of the structure/boat.

The feedback circuit may cause serious injury or death of the personnel working on the power lines and/or personnel near the working area.

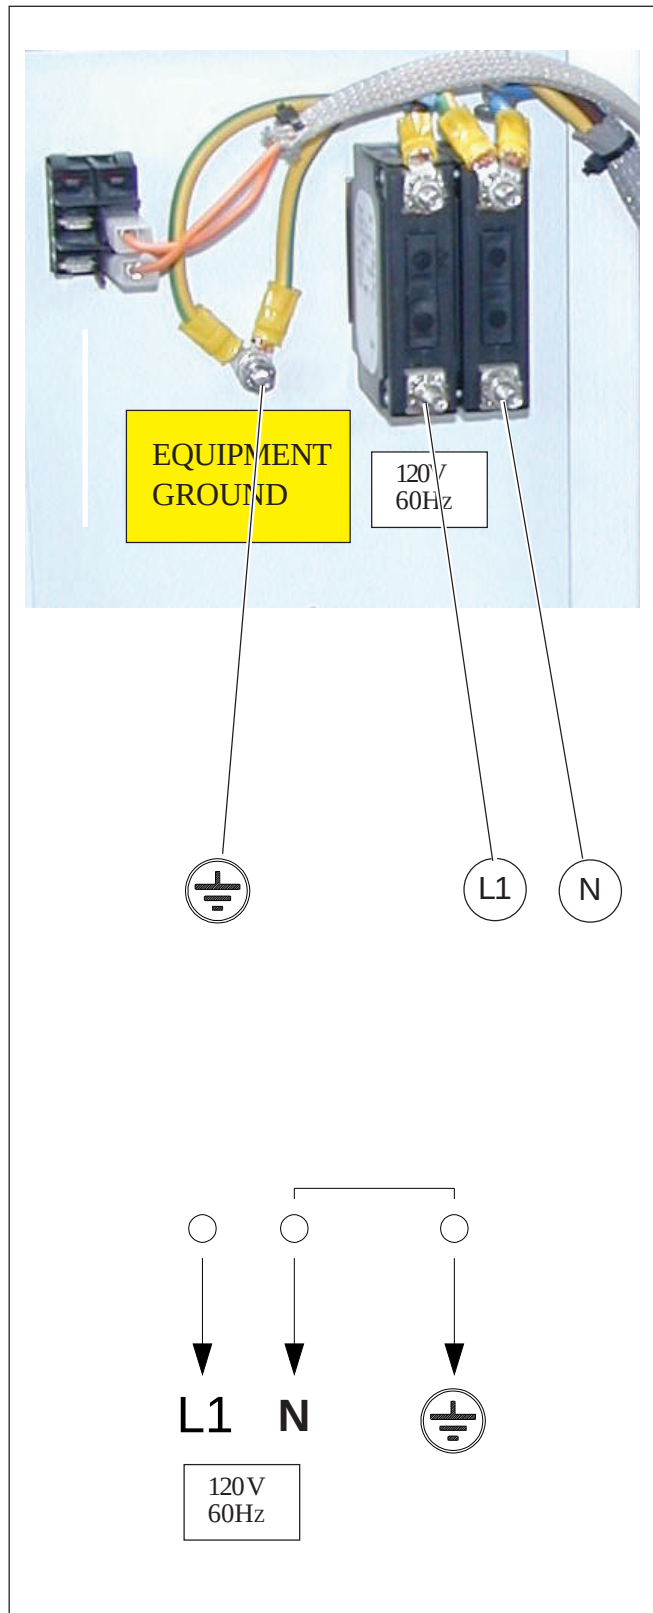

- Make sure that the sum of the generator loads doesn't overcome the nominal power of the generator group.

- Despite the group is provided with a thermal switch (rif.1), it's recommend to interpose magnetothermal protections or similar between generator and electric users, according to the following table.

3.7.4 GENERATOR - NETWORK SWITCHING

A switch must be interposed on the utility line to allow switching the utilities from the generator to an external power supply line.

The switch must be dimensioned on the basis of the entity of the loads involved;a broad diagram is shown in ref.2.

⚠ DANGER

Do not connect the generator to a public electrical system (e.g. wharfs, ports, houses, other boats, etc.).

The feedback circuit may cause serious injury or death of the personnel working on the power lines and/or the personnel near the working area.

⚠ DANGER

The generator may only be installed by qualified technicians. Malfunctioning due to improper installation may cause injury or death.



⚠ DANGER

Do not modify the default electrical connections for other applications. If necessary, contact our distributors.

3.7.5 EMERGENCY STOP

The generator can be stopped by setting the switch (ref.3) to the (OFF) position.

GB

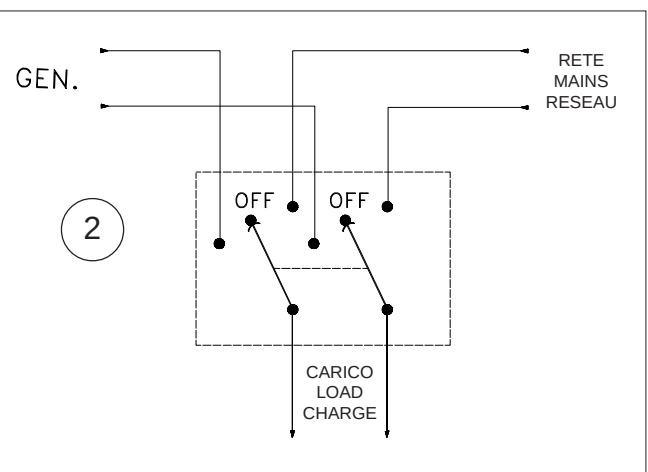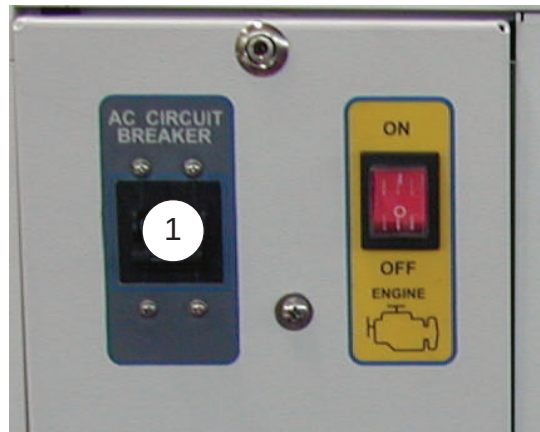

4 USING THE GENERATOR

4.1 PRELIMINARY CHECKS

Before beginning with any starting procedures, it is extremely important to “familiarise” yourself with the generator and its controls.

Furthermore, visually inspect the generator and the installation.

Any source of real or potential risk must be eliminated before proceeding.

- Identify the position of the emergency stop buttons, switches and other emergency systems on the generator.
- Learn the specific emergency procedures pertaining to the installation in question.
- Check the oil level by means of the dipstick (**ref. 1**). See table for recommended oils (**chap.6.5**)
- Check that all the anchoring points of the generator are properly tightened.
- Check that all the electrical utilities are off to prevent starting the generator on load.
- Check that the water and fuel pipes are properly connected
- Check that all the electrical connections have been properly made and that no connections are in a bad state.
- Check that the seawater cock is open (**ref. 2**)
- If a check valve has been fitted on the seawater intake (as recommended in the installation manual), check that the section of the water circuit leading from the pump to the valve has been manually primed (**ref.3**).




4.2 FUELLING


The fuelling operations must be carried out extremely carefully and the tank must not be filled over the maximum level.



- Fuel is a toxic and flammable liquid, and must therefore be kept in hermetically sealed containers and stored in inaccessible places.
- Fuelling must always be carried out with the engine off and the selector in the OFF position.
- Do not smoke and do not use naked flames during fuelling.
- Fuel in well-ventilated places.
- Avoid contact of fuel with the skin and do not inhale the fumes.

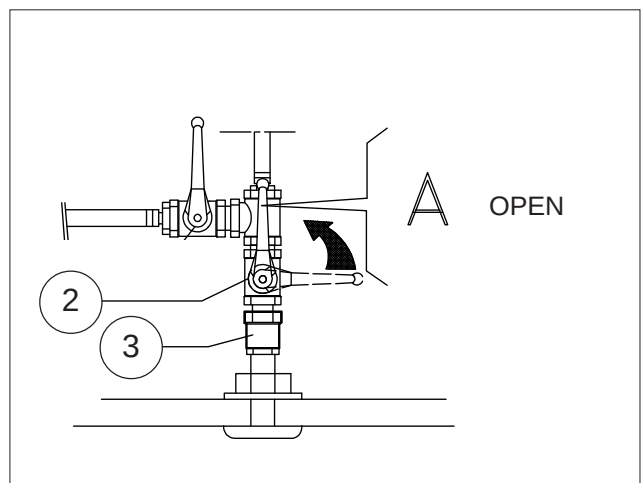

4.3 STARTING THE GENERATOR

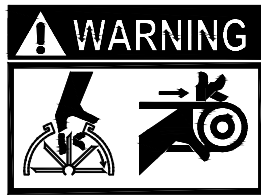

⚠ CAUTION


Before starting the generator check that all the doors is closed.

Before starting the generator ensure that all the preliminary checks have been carried out.

Start

Press the ON/OFF pushbutton (ref.1) to turn on the module. It will show “mase” logo on display.

Press and hold pressed the START pushbutton (ref.2) in order to preheat the glow plugs (pre-starting) and then start the engine. Release only when the engine is started, paying attention to not exceed 5 seconds for each starting attempt and doing a pause of about 30 seconds between them.

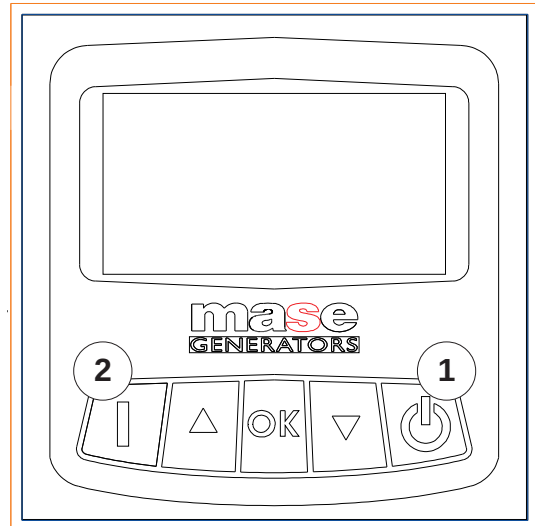

GB

⚠ CAUTION


Repeated unsuccessful starting attempts may cause excessive accumulation of water in the exhaust system with possible serious damage to the engine.

In case of have difficulty in starting the engine, absolutely do not persist for a long time before first having closed the seawater intake cock (Ref.3).

During the running-in period (the first 50 hours), do not apply loads exceeding 70% of the rated power of the generator.

I INFORMATION

For more detailed information, consult the manual provided by the engine manufacturer, which accompanies each generator.

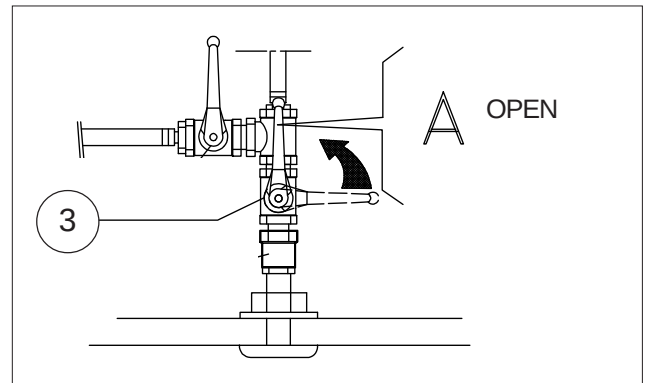

4.4 STOPPING THE GENERATOR

Stop the generator by pressing the STOP button on the control panel (ref.1).

The generator can be stopped also by setting the switch (ref.4) to the “OFF” position.


⚠ CAUTION

Before stopping the generator, it is advisable to run it for a few minutes without drawing current in order to allow gradual cooling of the engine and the alternator.

4.5 EMERGENCY STOP

For an emergency stop of the generator, set the emergency switch to OFF.

Once the causes that determined the need for an emergency stop have been eliminated, reset the emergency switch to ON to return to the operating conditions. Start the generator from the remote control panel.

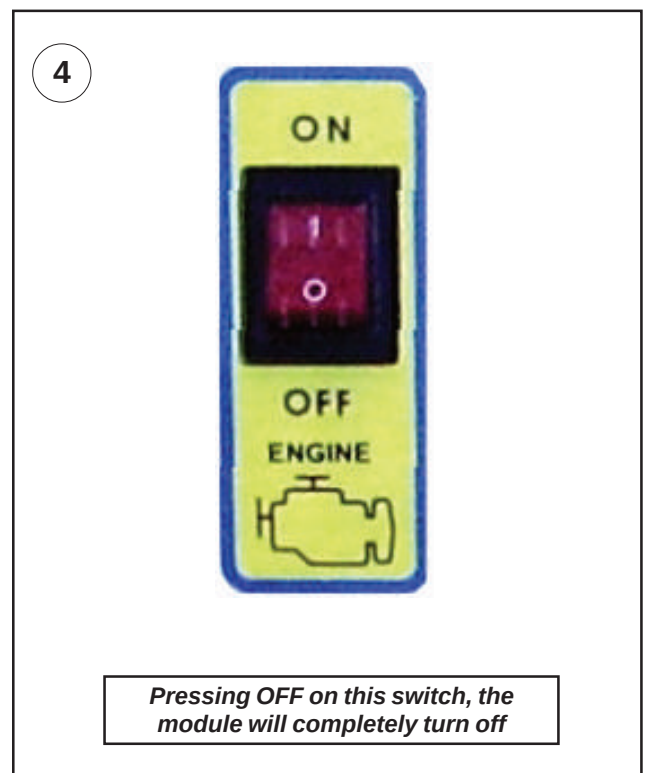

5 SAFETY SWITCHES AND WARNING SIGNALS

The generators are equipped with a set of safety switches which protect it against improper use and problems which may jeopardise its integrity.

5.1 PROTECTION AGAINST SHORT-CIRCUITS AND OVERLOAD

The generator is protected against short-circuits and electrical overload.

A magnetothermal switch (**ref.1**) cuts the power when a short-circuit occurs or when the power delivered exceeds the rated value.

Before restoring the contact, remove the cause of the cutout.



5.2 PROTECTION AGAINST SHORT-CIRCUITS OF LOW-VOLTAGE ELECTRICAL SYSTEM.

In the event of a short-circuit of the low-voltage electrical system, two fuses 3A - 30A (**ref.2**) break the circuit stopping the generator. In this case the warning lights of the engine protection module will all be off and it will not be possible to reattempt starting.

I INFORMATION

If one of the above safety switches trip, find and eliminate the cause and then press the STOP button to reset the control panel (otherwise the signal would remain in memory inhibiting engine starting).

ALARM CHART FOR CBU MODULE

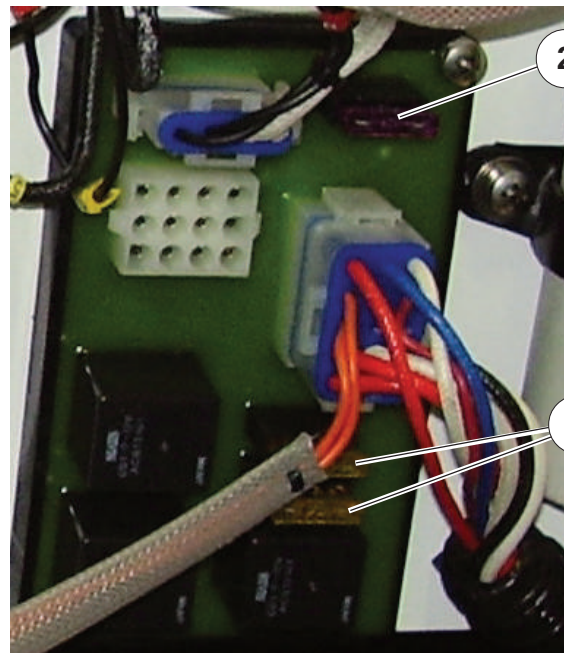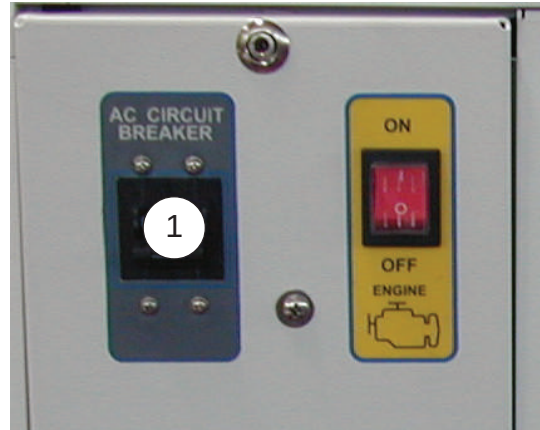

Alarm code	Symbol	Alarm name	Description
0		Emergency stop	Means that the emergency pushbutton is pressed.
3		Missing engine stop	Means that, after engine is stopped, the electronic board detects active parameters as the engine is still running.
4		Mechanical failure	If generator is running, means that all detected parameters are simultaneously missing.
11		High engine digital temperature	Means that the digital sensor detects high temperature
14		Digital low oil pressure	Means that the digital sensor detects low oil pressure
15		Digital oil gauge failure	Means that there is not wiring connection to digital gauge for oil pressure, with engine turned off.
16		High level battery	Means that the battery voltage is too high.
17		Low level battery	Means that the battery voltage is too low.
20		Generator: low frequency	Means that the generator frequency is too low.
21		Generator: high frequency	Means that the generator frequency is too high.
22		Generator: low voltage	Means that the generator voltage is lower than the set alarm threshold.
23		Generator: high voltage	Means that the generator voltage is higher than the set alarm threshold.
24		Alternator high temperature	Means that the high engine temperature contact is open.

5.3 ENGINE PROTECTION MODULE

CBU device (Can-Bus transmission unit) controls and driving the genset.
Large display and the control push-buttons allow an easy use and monitoring of the CBU unit.

Displayed information

- Voltage Vac
- Frequency Hz
- Hourmeter
- Battery voltage of the genset
- Voltage of onboard batteries
- Low oil pressure alarm
- High engine temperature alarm
- High alternator temperature alarm
- Displayed stop alarms
- Storage and back-up of alarms
- Maintenance (first 50 hours)

Input / Output signals - Commands - Checks


- Connector mod. 485 for MODBUS protocol (It allows monitoring and driving the genset by the boat main control monitor)
- Output all included alarms (optional)
- Input voltage of onboard batteries (from 12V up to 24V) (optional)
- Input battery voltage of the genset
- Input Start/Stop from remote panel
- Switch off button
- Scroll through display buttons
- Emergency pushbutton (predisposition)

⚠ CAUTION

The low oil pressure protection does not give an indication of the oil level. The oil level must daily be checked in order to prevent damage to the engine. The engine correctly works if it doesn't exceed inclinations max of 30° for up to 3 minutes and 25° without limits of time, in comparison to both longitudinal and transversal axles. If the engine works to greater inclinations, it risks an insufficient lubrication and/or aspiration of oil from the filter air.

I INFORMATION

If one of the above safety switches trip, find and eliminate the cause and then press the STOP button to reset the control panel (otherwise the signal still in memory inhibiting engine starting).

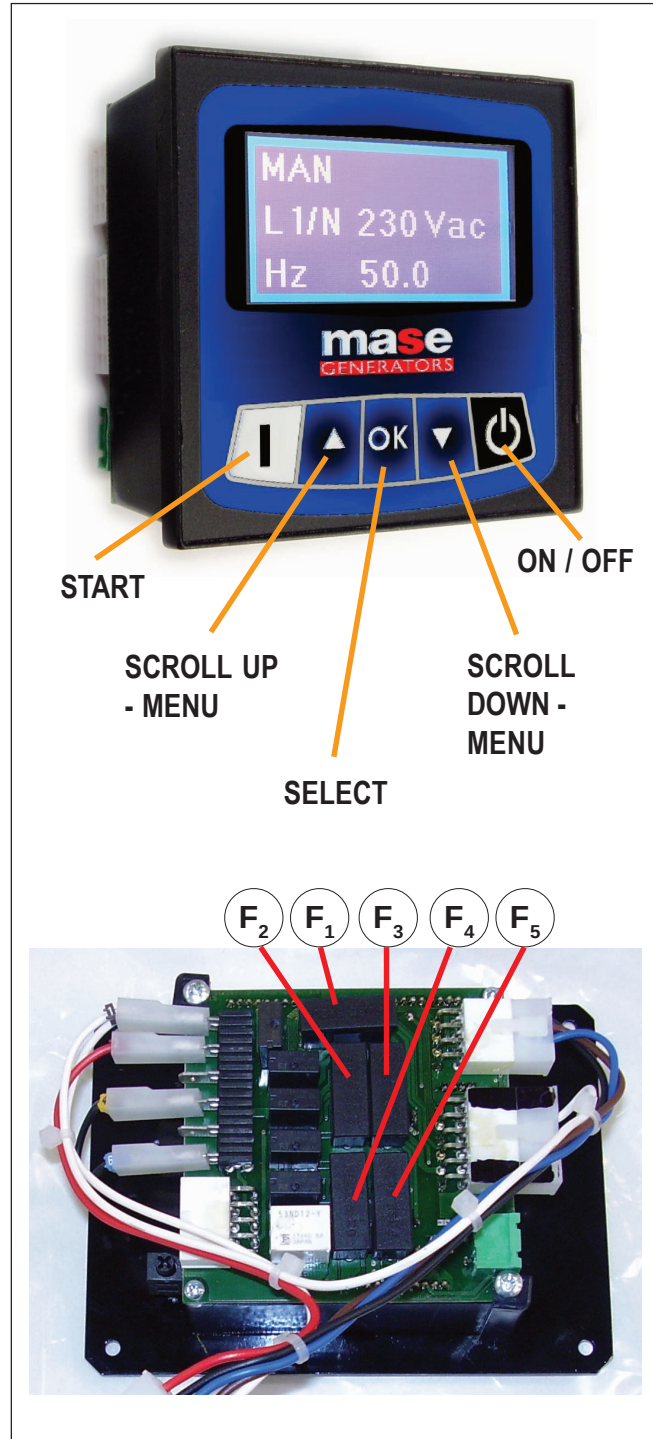

GB

5.4 FUSES

- Protection module fuses

On the printed circuit of the engine protection module there are five fuses to protect the module. Remove the frontal panel unscrewing the 4 screws to enter in it.

- F₁ : 5A 5x20mm for relay "ALARMS"
- F₂ : 5A 5x20mm for relay "IP" (insulated poles)
- F₃ : 5A 5x20mm for relay "RUNS"
- F₄ : 5A 5x20mm for relay "GLOWS"
- F₅ : 5A 5x20mm for relay "EV" (solenoid)

6 MAINTENANCE

6.1 PREAMBLE

It is recommended to strictly follow the instructions in the manual provided by the engine manufacturer, which accompanies each generator.

It is important to regularly check and carry out maintenance on the generator. The operations to carry out must be decided on the basis of the hours of operation.

In order to carry out maintenance, the side and top doors must be removed.



⚠ WARNING

The generator is started from a remote control panel. In order to prevent any accidental starting, set the emergency switch to the 0 (OFF) position. Disconnect the negative pole from the starter battery.

⚠ WARNING

Any maintenance operation on the generator must be carried out with the engine off, after leaving it to cool down sufficiently.

Carefully read paragraph 1.5 "General danger information" in the manual. Periodically check the electrical safety switches, such as the emergency button, the earthing system, etc.

6.2 ROUTINE ENGINE MAINTENANCE


The periodic operations to be carried out on the engine are indicated in the table "**Service schedule**" in **paragraph 6.18**.

For more detailed information, consult the manual

provided by the engine manufacturer, which is provided with each generator.

6.3 ENGINE OIL CHECK

- Check the oil level by means of the cap/dipstick (**ref.1**). The oil level must always be between the MAX and MIN notches engraved on the dipstick.
- When checking the oil level, ensure that the generator is positioned horizontally.

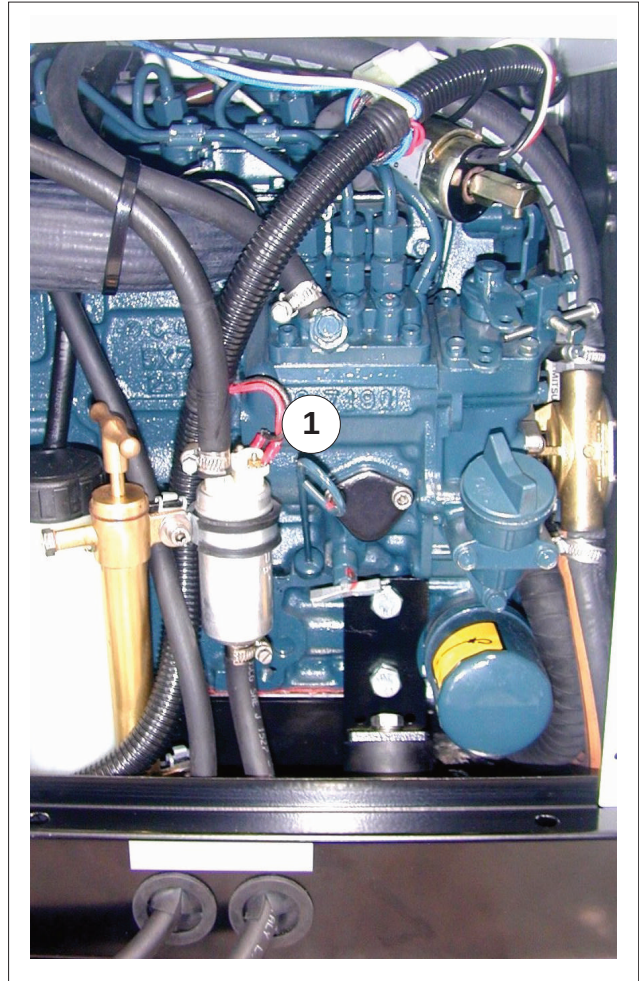

6.4 ENGINE OIL CHANGE ✂

Use diesel engine oil

Top up the engine oil through the hole (ref.1). To change the oil in the engine oil sump, take out the dipstick (ref.2). Suct exhaust oil with a manual pump (ref.3). It is advisable to drain the oil when it is still sufficiently warm so that it flows easily.

⚠ CAUTION

- Dispose of the used oil in an appropriate manner, since it is a polluting product.
- Take the used oil to special waste collection centres for disposal.
- Wear gloves to protect the hands from contact with oil. In case of accidental contact with engine oil, thoroughly wash the affected part with soap and water.
- Do not top-up with oil or refuel above the maximum level. An excessive quantity of oil may cause damage to the engine.

i INFORMATION

Always check proper viscosity of the engine oil in relation to the range of temperatures in which the generator operates, as indicated in chap 6.5.

6.5 OIL FILTER ✂

To replace the engine oil filter cartridge, follow the procedure below:


- Remove and extract the filter (ref.4).
- Screw in the new filter after cleaning the rubber seal and seating surface and ensure it is in perfect condition.

⚠ CAUTION


When the operation has been completed, thoroughly clean all the parts of the generator soiled with oil and fuel.

i INFORMATION

For engine safety reasons, use only original spare parts.

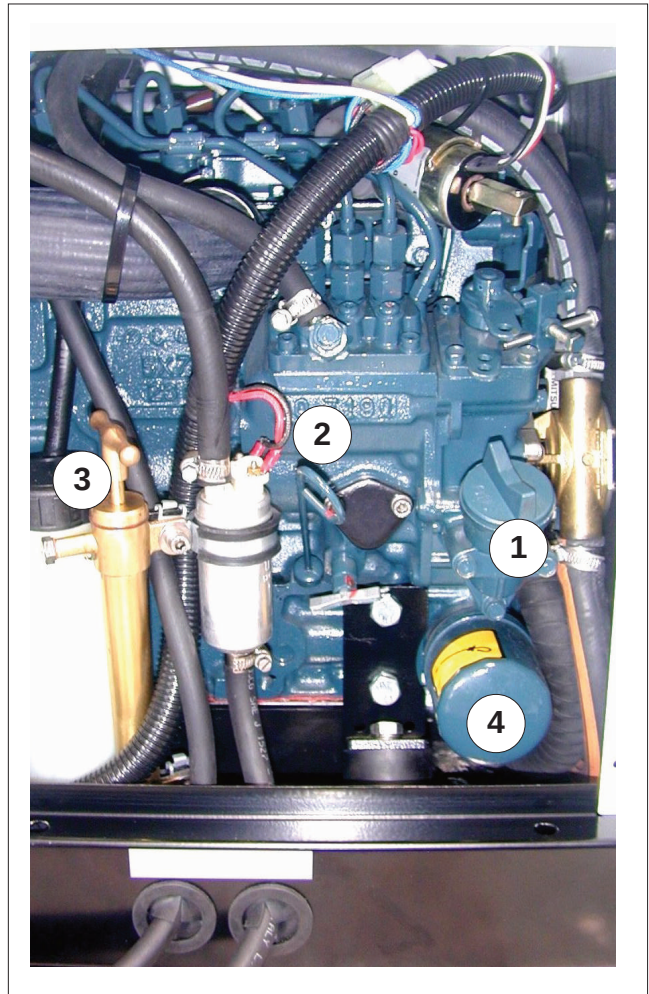

GB

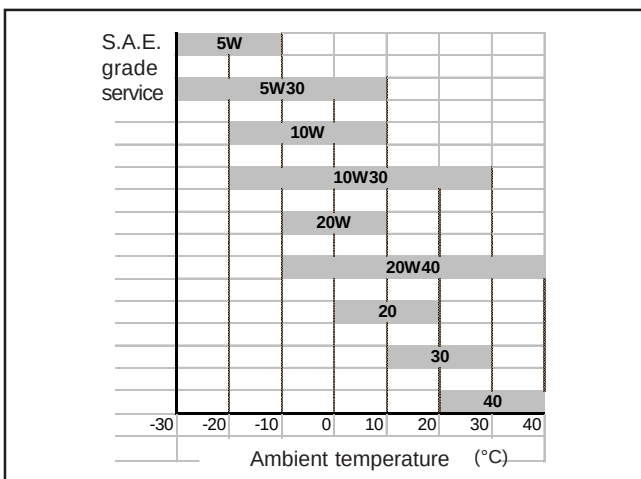

GB

6.6 REPLACING / CLEANING THE FUEL PUMP FILTER

This operation is carried out following the steps below:

- Remove the pipe (**ref.1**)
- Slide out the filter (**ref.2**)
- Clean or replace it

For reassembly repeat the operations in reverse order.
After replacing the filter, the fuel system has to be bled by carrying out the operations described in **paragraph 6.8**.

⚠ WARNING

Do not let the fuel come into contact with the skin. Wear gloves and protective goggles during maintenance operations.

In the event of contact with fuel, immediately and thoroughly wash the affected part with soap and water. When the operation has been completed, thoroughly clean off all traces of fuel and take the cloths used to special waste collection centres.

6.7 REPLACING THE LINE FUEL FILTER

Follow the instructions given in the manual of the type of fuel filter installed (**ref.3**). See Chap. 3.6.1 "Fuel filter".

6.8 BLEEDING THE FUEL SYSTEM**I INFORMATION**

The generator is equipped with an automatic fuel bleed valve. Should manual bleeding be necessary, press the ON button on the control panel and wait 30 seconds before starting the generator.



If there are air bubbles in the fuel system, the engine will not function regularly or will be unable to reach the rated rpm. Air may penetrate the fuel circuit through a not perfectly sealed joint (pipe, filters, tank) or when the fuel in the tank is at minimum level.

6.9 AIR FILTER

The IS series generators are fitted with a dry air filter (**ref.4**), which prevents foreign bodies from entering the combustion chamber. It is sufficient to clean the filter mass with diesel fuel once a year to remove any impurities.

⚠ CAUTION

Take the liquids used to wash the filter to special waste collection centres for disposal.

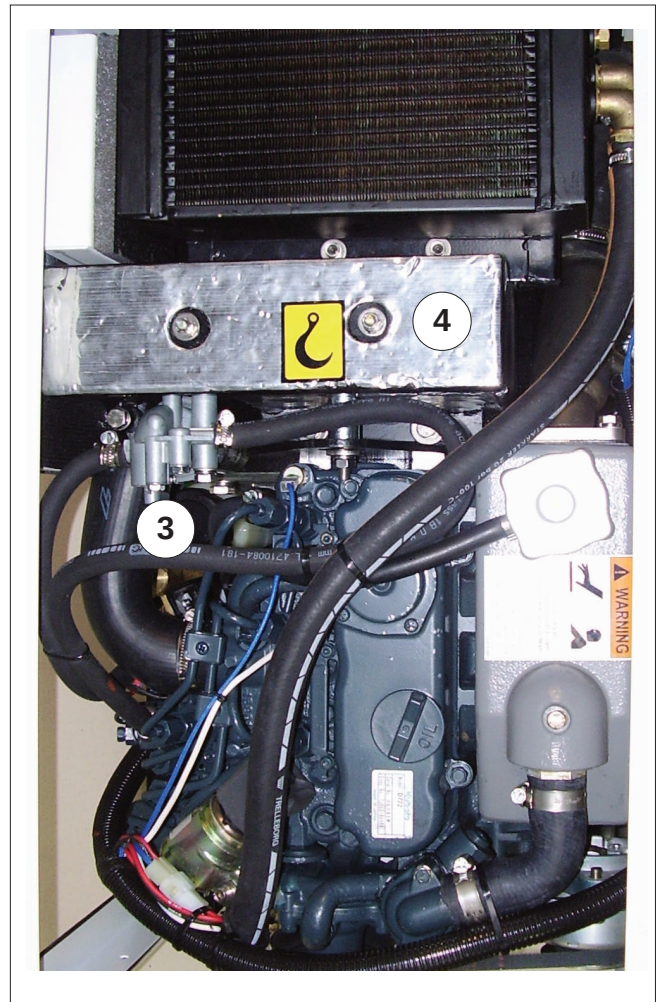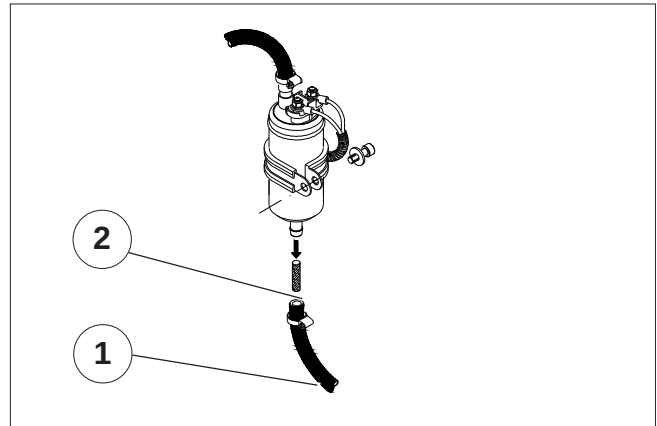

6.10 DRAINING THE COOLING SYSTEM


In order to carry out maintenance on the water/air exchanger or the cooling system, the seawater intake circuit must be drained.

Carry out this operation as follows:

- Close the seawater intake cock (**ref.1**).
- Open the drain tap (**ref.2**) until all the water has drained out.
- Close the drain tap.

⚠ CAUTION

Reopen the seawater intake cock before starting the generator.

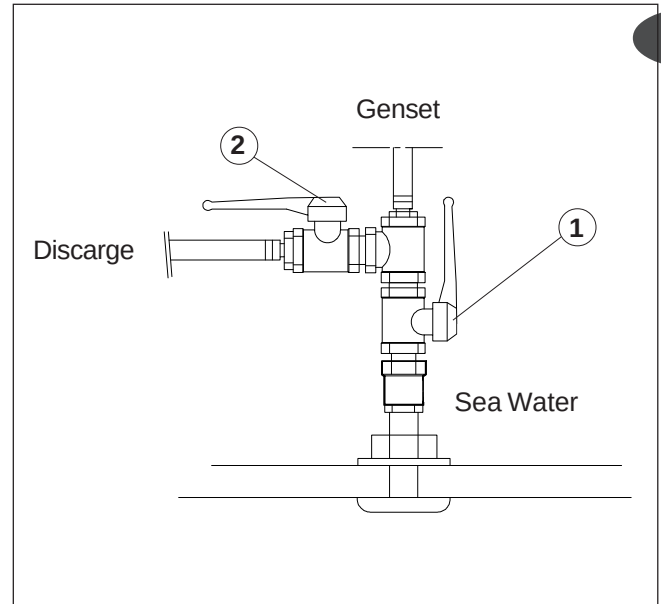


GB

6.11 REPLACING THE ZINC ANODE

A sacrificial zinc anode (**ref. 3**) has been fitted in the heat exchangers to protect them against galvanic currents. Periodically check the state of wear and replace it if necessary, in order to prevent galvanic currents from irreparably corroding the exchanger. It is recommended to check the zinc anode at least once a month when the generator is new in order to check how fast it wears, and then act accordingly.

It is in any case advisable to replace the zinc anode at least once a year.

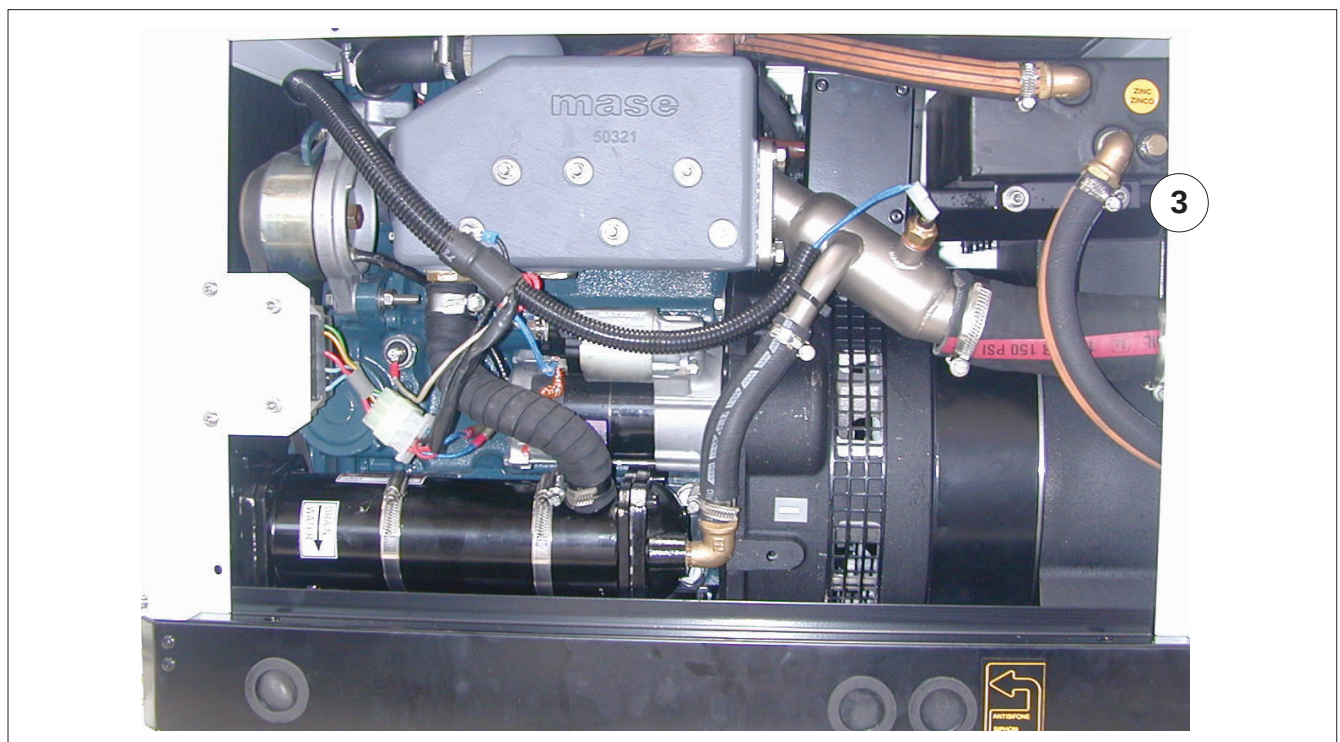

GB

6.12 SEAWATER PUMP MAINTENANCE

At least once a year check the integrity of the rubber seawater pump impeller.

Before opening the seawater pump to inspect the impeller, drain the seawater from the cooling system as described in **paragraph 6.10**.

To access the impeller, remove the cover (**ref.5**) and use pliers to extract the impeller (**ref.6**), pulling it hard towards the outside.

To refit a new impeller, repeat the operations described above working in reverse order.

6.13 CHECKING / REPLACING THE V-BELT ⚠



⚠ WARNING

Do not open the doors or hold the hands close to the V-belts and pulleys when the engine is running.

A V-belt is used to transmit the rotation motion from the drive shaft pulley to the seawater pump pulley (**ref.1**). A too tight belt accelerates wear, while a too slack belt results in the pulleys running in idle and insufficient water circulation.



Adjust the belt tension as follows:

Loosen the two adjusting screws (**ref.2**) and move the seawater pump towards the outside to increase tension or towards the inside to decrease it. Tighten the screws and check the tension.

The belt tension is correct when it sags about 5mm (**ref.3**) under a thrust force of 8kg (17,7lbs).

i INFORMATION

To prevent the belt from idling, do not spill any oil on it. If oil is spilled, clean it off with petrol.

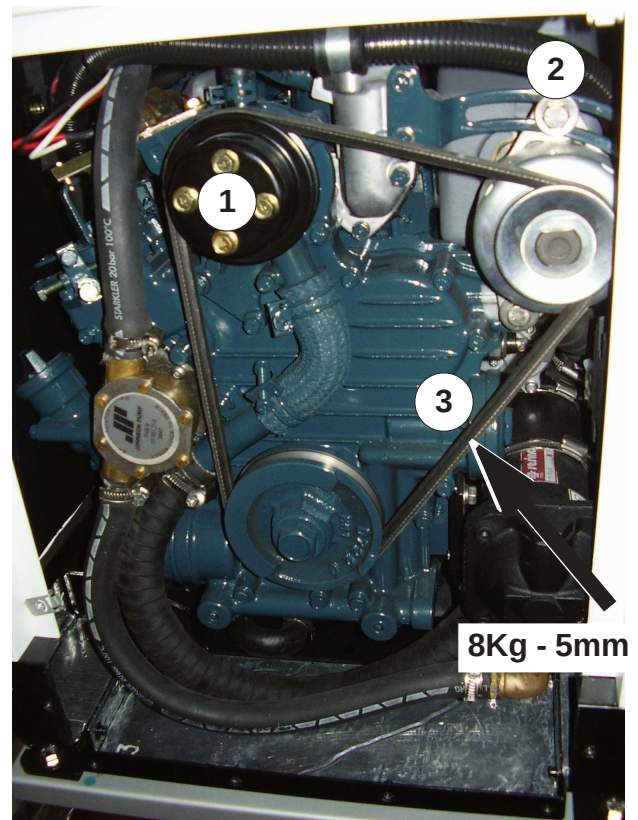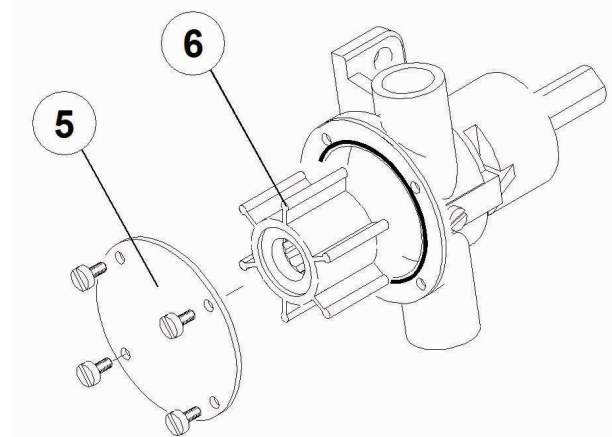

6.14 ALTERNATOR MAINTENANCE

The alternator used on this model generator is type synchronous, self-excited. This type of brushless alternator without manifold does not require any particular maintenance.

Periodic inspections and maintenance are limited to eliminating any traces of moisture and oxidation which may damage it.

6.15 BATTERY CHARGER



Before installing a new battery, it is important that it first be fully charged to charge it completely.

⚠ WARNING

The battery must be activated by personnel who has sulphuric acid for batteries and suitable equipment available.

At least once a month check the level of the electrolyte and, if necessary, top up with distilled water. If the generator is not used for a long period of time, it is advisable to disconnect it and store it in a dry place at a temperature above 10°C (50°F), and to carry out a full recharging cycle once a month.

⚠ WARNING

When topping up the batteries with distilled water, wear rubber gloves and protective goggles to prevent accidental contact of sulphuric acid with the skin. In the event of accidental contact, thoroughly wash the affected part with soap and water and consult a doctor.

⚠ CAUTION

If the battery is left completely flat for long periods of time, it may be irreparably damaged.

i INFORMATION

Before proceeding with recharging the batteries, check the level of electrolyte and, if necessary, top up with distilled water. This operation must be repeated when the charging cycle has been completed. Cover the positive terminal with Vaseline to protect it against corrosion and the formation of oxide.

GB

6.16 CHECKING / REPLACING THE ALTERNATOR V-BELT ✕

Description
Seawater pump impeller
Seawater pump gasket
Seawater pump belt
Oil filter
Fuel filter
Zinc anode
Fuses

OPTIONAL

A kit with recommended spare parts is available and may be ordered from the Mase Service Network or Technical Service.

6.17 PERIODS OF INACTIVITY ✕

Start up the generator at least once a month. If the generator is not to be used for a long period of time, carry out the following operations:

- Change the engine oil.
- Replace the oil filter cartridge (see **par.6.5**).
- Replace the fuel filter cartridge (see **par.6.6, 6.7**).
- Remove the injector and pour 2 cc of engine oil into the cylinder and let the engine turn a few times by manually operating the drive shaft pulley.
Refit the injector.
- Replace the zinc pads (see **par.6.11**)
- Aspirate some antifreeze into the seawater intake pipe in order to protect the exchangers against low temperatures, and lubricate the seawater pump impeller and the metal parts in the cooling system.
- Disconnect the starter battery and store it in a dry place (see **par. 6.15**)
- Disconnect the sea exhaust pipe from the engine manifold.
- Clean the seawater filter.
- Close the seawater intake cock.
- Drain the seawater from the exhaust.
- Clean and lubricate the antisiphon valve (siphon break), if installed.
- Clean the outside of the generator, removing all dust and impurities.
- Cover the generator with a nylon sheet and store it in horizontal position in a dry and ventilated place.

6.18 PERIOD CHECKS AND MAINTENANCE
PERIOD CHECKS AND MAINTENANCE
GB

Perform service at intervals indicated	Before starting	Every 50 hrs.or 1 Month	Every 100 hrs.or 2 Month	Every 200 hrs.or 3 Month	Every 400 hrs.or Yearly	Every 500 hrs.	Every 800 hrs.
Fuel system							
Check the fuel level and refill	○						
Remove sediment from fuel tank						○	
Clean fuel filter			○				
Replace the fuel filter element					○		
Check the fuel injection nozzle					●		
Check the fuel injection timing					●		
Check the fuel injection pump							●
Lubrication system							
Check the oil level	○ (Before operation)	○ 10 ^h					
Replace the oil		○ 1 st time	○				
Replace the oil filter element		○ 1 st time		○			
Cooling system							
Inspect exhaust system components for cracks and corrosion (exhaust line, hose clamps, silencer and outlet flapper)	○						
Check function of siphon break (if equipped)		○					
Replace seawater pump impeller				○			
Check condition of heat exchanger anticorrosion zinc		○					
Check thermostat function						●	
Flush cooling system						●	
Intake / Exhaust system							
Check the air cleaner element			○				
Replace air cleaner element					○		
Check the air intake pipe			○				
Check exhaust system		○ (thereafter)					
Clean exhaust/water mixing elbow				○			
Electrical system							
Check and tighten electrical connections		○					
Clean battery cables						○	
Check the electrolyte level in the battery			○				
Engine and mounting							
Check for leakage of water and oil	○	○ (thereafter)					
Retighten all major nuts and bolts				○			
Check tightness of mounting bolts/vibromounts					●		
Check the belt-tension			○				
Replace belt						○	
Check and adjusting intake / exhaust valve clearance					●		○
Remote control system, etc.							
Check remote control operation		○		○ (thereafter)			
Test run generator set		○					

○ In presence of this symbol it is possible to effect the technical support autonomously .

● In presence of this symbol it is obligatory to effect the technical support in an our retailer /workshop authorized by MASE.

6.19 ANOMALIES, CAUSES AND REMEDIES***The starter motor turns but the main engine does not start***

- Check that there is fuel in the tank. (Fill up)
- Check if the stop electromagnet is in the firing position. (Consult Service Centre)
- Bleed the air bubbles from the fuel circuit.

The engine protection module is not activated when the ON button is pressed

- Check that the fuse switch is open. (Restore the fuse)
- Check battery cables and clamps, and electrical connections. (Reconnect)
- Check integrity of the battery. (Recharge or replace)
- Check that the emergency button is in ON position. (Turn it on ON position)

The generator switches off during the operating period

- Check if a protection has been activated with the relevant light coming on. (Remove the cause and retry starting)
- Check if there is fuel in the tank. (Fill up)

There is a high grade of smoke at the engine exhaust

- Check that the oil level in the sump does not exceed the MAX index. (Restore level)
- Check that the generator is not in overload.
- Check calibration of the injectors. (Consult Service Centre)

The engine runs irregularly

- Check the fuel filters. (Replace)
- Bleed the air bubbles from the fuel circuit.

The alternator voltage is too low

- Check the engine rpm: 3720 rpm without utilities connected at 62Hz.
- Check that there is not a too heavy load. (Reduce the load)
- Capacitors breakdown. (Contact Service Centre)
- Alternator failure. (Contact Service Centre)
- Check all electrical connections. (Contact Service Centre)
- Voltage regulator failure. (Contact Service Centre)

Starter battery flat

- Check the electrolyte level in the battery. (Restore the level)
- Check functioning of the DC alternator.
- Check integrity of the battery.

The generator does not deliver power

- Check that the magnetothermal switch is in the "ON" position. (Contact Service Centre)
- Capacitors breakdown. (Contact Service Centre)
- Alternator failure. (Contact Service Centre)
- Check all electrical connections. (Contact Service Centre)
- Voltage regulator failure. (Contact Service Centre)

6.20 HOW TO ORDER THE SPARE PARTS

In order to ensure a good functioning of the generator, we recommend to use original spare parts only.

The spares can be purchased from the **mase** authorized assistance network (consult the **SERVICE** manual enclosed with the generator).

You can get **any further information** contacting the **mase** central Service.

7 TRANSPORT. STORAGE. LIFTING AND. HANDLING AND PACKAGING

7.1 TRANSPORT AND STORAGE

Packaging: Supplied directly by Mase Generators.
The total weight of the packed generator is given in **Paragraph 2.3 “Table of technical characteristics”**.

Transport: During transport the generator (with or without packaging) must be protected against atmospheric agents, it must not be turned upside down and must be protected against knocks.

! CAUTION

It is strictly prohibited to pollute the environment with the packaging

Storage: The generator must be stored in horizontal position and away from atmospheric agents and humidity.

7.2 LIFTING AND HANDLING OF THE PACKED GENERATOR UNIT



! CAUTION

Always check that the capacity of the lifting means and its accessories is greater than the weight of the generator printed on the identification plate.

Use a lift truck to handle the generator (with capacity greater than the weight of the generator indicated in the table of technical characteristics (**Paragraph 2.3**) of the Use and Maintenance Manual), inserting the forks under the base at the lower part of the generator.

For handling on level ground, a transpallet is sufficient with a suitable capacity according to the table of technical characteristics (**Paragraph 2.3** of the Use and Maintenance Manual).

! INFORMATION The centre of gravity of the generator corresponds to about the centre of its geometrical volume.

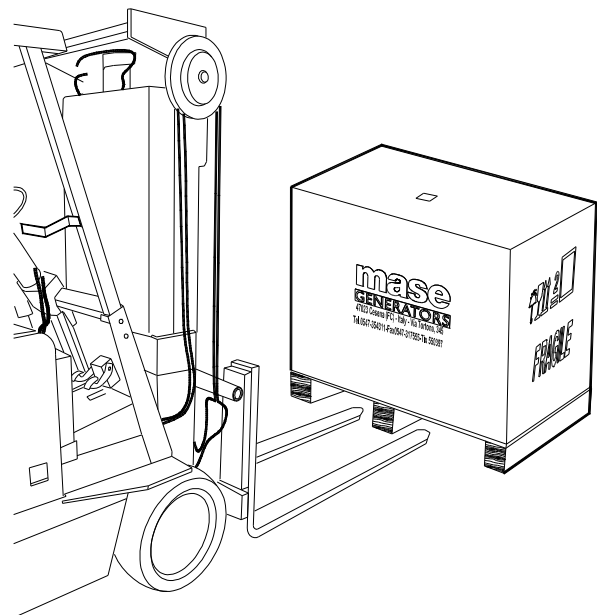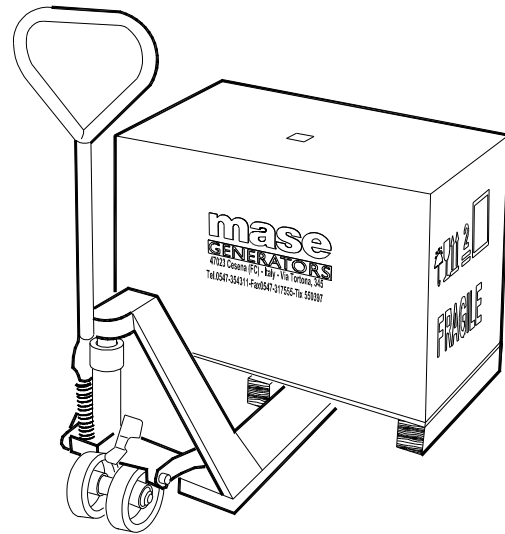

8 GUARANTEE AND RESPONSIBILITY

8.1 GUARANTEE

- The **mase** generators and all their components are guaranteed free of defects and are covered by the guarantee for a period as required by current legislation from the date of installation.
- Not covered by the guarantee are: failed observance of the installation regulations, damage caused by natural disasters, accidents, defects of the electrical system including the load to which the generator is connected, negligence, improper use or abuse by the operator and damage caused by repairs carried out by unqualified personnel.
- Repairs that cannot be carried out at the place of installation can be carried out at **mase** laboratories or at authorised workshops. Transport expenses will be borne by the Customer.
- Under no circumstances does the Customer have the right to claim compensation for damages or side effects caused by use of the machine in a manner not conform to what is described in this manual.

8.2 LIMITS OF RESPONSIBILITY

MASE GENERATORS S.p.A is responsible for anything regarding the safety, reliability and performance of the Generator on the condition that:

- The generator is used by persons trained through the use and maintenance manual.
- The installation is carried out according to **mase** instructions.
- The service procedures are carried out exclusively by **mase** specialised technical personnel.
- The electrical system and the loads to which the generator is connected is in conformity with the applicable CEI regulations.
- The Generator is installed and used in accordance with the installations provided in this manual.
- Use original spare parts specific to each model.
- Use suitable fuel.
- Diesel fuel conforming to standards ASTM A975.

9 DISPOSAL

9.1 DISPOSAL OF THE WASTE MATERIALS DERIVING FROM MAINTENANCE AND SCRAPPING

- The packaging used for transport is biodegradable and thus easy to dispose of by companies authorised for paper collection.
- The electrical components must be taken to companies authorised for the collection of electronic material.
- All the painted metal parts must be taken to companies authorised for the collection of metals.

WARNING

Please note that the system and its components contain materials that, if dispersed in the environment, may cause significant ecological damage.

The following materials must be delivered to specific collection centres authorised for their disposal:

- Starting battery
 - Exhaust lubrication oils;
 - Mixtures of water and anti-freeze;
 - Filters;
 - Auxiliary cleaning material (e.g.: rags smeared or soaked with fuel and/or chemical cleaning products).
- Any other material not listed above must be taken to companies authorised for the collection of industrial waste.


10 WIRING DIAGRAM

GB

10.1 WIRING DIAGRAMS

120V

Cod.48713

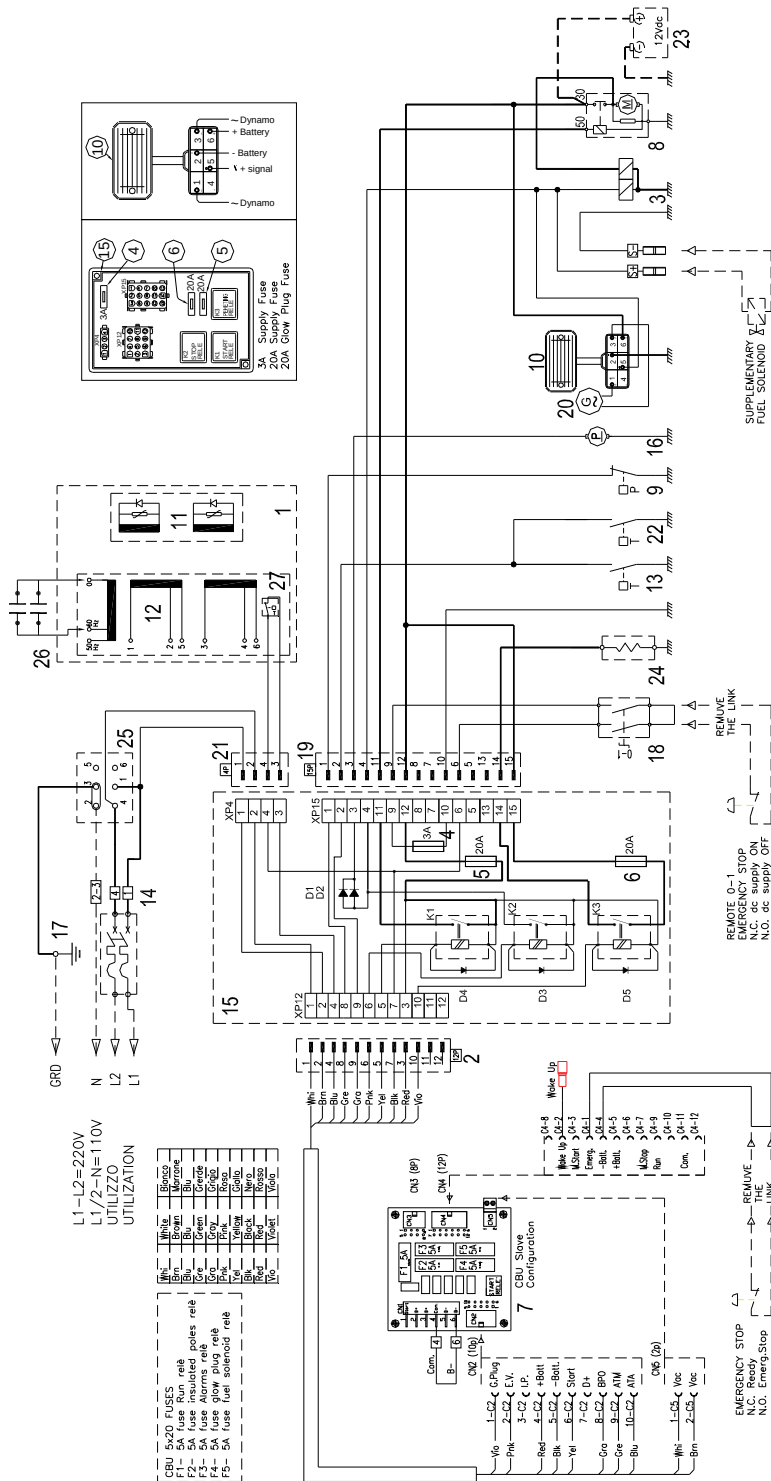

- | | | | |
|----|--------------------------|----|---------------------------|
| 1 | ALTERNATOR | 21 | 4 POLES CONNECTOR |
| 2 | 12 POLES CONNECTOR | 22 | ENGINE THERMOSTAT |
| 3 | STOP ELECTROMAGNET | 23 | BATTERY |
| 4 | FUSE | 24 | PREHEATING |
| 5 | FUSE | 25 | ALTERNATOR TERMINAL BOARD |
| 6 | FUSE | 26 | CAPACITOR |
| 7 | ENGINE PROTECTION MODULE | 27 | ALTERNATOR THERMOSTAT |
| 8 | STARTER MOTOR | | |
| 9 | OIL PRESSURE SWITCH | | |
| 10 | BATTERY CHARGE REGULATOR | | |
| 11 | ROTOR | | |
| 12 | STATOR | | |
| 13 | ENGINE THERMOSTAT | | |
| 14 | MAGNETOTHERMAL SWITCH 2P | | |
| 15 | RELAY CARD | | |
| 16 | FUEL PUMP | | |
| 17 | GROUND CONNECTION | | |
| 18 | O/I SWITCH | | |
| 19 | 15 POLES CONNECTOR | | |
| 20 | DINAMO | | |



Mase Generators S.p.a. • Via Tortona, 345 • 47522 **Cesena** (FC) ITALY • Tel. **(+39) 0547.35.43.11**
Fax **(+39) 0547.31.75.55** • www.masegenerators.com • e-mail mase@masegenerators.com